

## IN485HIT001R000 GATEWAY

Hitachi Commercial and VRF Systems  
to BACnet MS/TP and Modbus RTU

USER MANUAL

Version 2.0.7

Publication date 2024-07-04



Copyright © Intesis

*Disclaimer*

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

# Table of Contents

|  |           |
|--|-----------|
| <b>1. Description, Compatible AC systems, and Order Codes .....</b>    | <b>1</b>  |
| <b>2. General Information .....</b>                                    | <b>2</b>  |
| 2.1. Intended Use of the User Manual .....                             | 2         |
| 2.2. General Safety Information .....                                  | 2         |
| 2.3. Admonition Messages and Symbols .....                             | 3         |
| <b>3. Quickstart Guide for the IN485HIT001R000 Gateway .....</b>       | <b>4</b>  |
| <b>4. Overview .....</b>   | <b>5</b>  |
| 4.1. Inside the Package .....  | 6         |
| 4.2. Main Features .....   | 6         |
| 4.3. Gateway Capacity .....  | 6         |
| 4.4. General Functionality .....                                       | 6         |
| <b>5. Hardware .....</b>   | <b>7</b>  |
| 5.1. Mounting .....  | 7         |
| 5.2. Connection Procedure .....  | 8         |
| 5.3. Coexistence of the Gateway with a Remote Controller .....         | 9         |
| 5.4. Connection to an External Power Supply .....                      | 10        |
| 5.5. DIP Switches .....  | 11        |
| 5.6. LED Indicators .....  | 13        |
| 5.7. Technical Specifications .....                                    | 14        |
| 5.8. Dimensions .....  | 14        |
| <b>6. Restore the Factory Settings .....</b>                           | <b>15</b> |
| <b>7. BACnet Specifications .....</b>                                  | <b>16</b> |
| 7.1. Objects .....   | 16        |
| 7.1.1. Supported Object Types .....                                    | 16        |
| 7.1.2. Member Objects .....  | 16        |
| 7.1.2.1. Type: Gateway .....   | 16        |
| 7.1.2.2. Type: Indoor Unit .....                                       | 16        |
| 7.1.3. Objects and Properties .....                                    | 18        |
| 7.1.3.1. Hitachi AC Gateway (Device Object Type) .....                 | 18        |
| 7.1.3.2. OnOff_status (Binary Input Object Type) .....                 | 20        |
| 7.1.3.3. OnOff_command (Binary Output Object Type) .....               | 21        |
| 7.1.3.4. Mode_status (Multistate Input Object Type) .....              | 22        |
| 7.1.3.5. Mode_command (Multistate Output Object Type) .....            | 23        |
| 7.1.3.6. Setpoint_status (Analog Input Object Type) .....              | 24        |
| 7.1.3.7. UserSetpoint_status (Analog Input Object Type) .....          | 25        |
| 7.1.3.8. Setpoint_Command (Analog Output Object Type) .....            | 26        |
| 7.1.3.9. VirtualTemperatureActive (Binary Input Object Type) .....     | 27        |
| 7.1.3.10. FanSpeed_Status (Multistate Input Object Type) .....         | 28        |
| 7.1.3.11. FanSpeed_Command (Multistate Output Object Type) .....       | 29        |
| 7.1.3.12. AirDirectionUD_Status (Multistate Input Object Type) .....   | 30        |
| 7.1.3.13. AirDirectionUD_Command (Multistate Output Object Type) ..... | 31        |
| 7.1.3.14. RoomTemperature_Status (Analog Input Object Type) .....      | 32        |
| 7.1.3.15. RoomTemperature_Command (Analog Output Object Type) .....    | 33        |
| 7.1.3.16. ErrorCode (Analog Input Object Type) .....                   | 34        |
| 7.1.3.17. ErrorCodeM (Multistate Input Object Type) .....              | 35        |
| 7.1.3.18. ErrorActive (Binary Input Object Type) .....                 | 36        |
| 7.1.3.19. ErrorAddress (Analog Input Object Type) .....                | 37        |

|  |           |
|--|-----------|
| 7.1.3.20. ErrorReset (Binary Output Object Type) .....               | 38        |
| 7.1.3.21. OnTimeCounter (Analog Value Object Type) .....             | 39        |
| 7.1.3.22. FilterSign (Binary Input Object Type) .....                | 40        |
| 7.1.3.23. FilterSignAddress (Analog Input Object Type) .....         | 41        |
| 7.1.3.24. FilterReset (Binary Output Object Type) .....              | 42        |
| 7.1.3.25. Occupancy (Multistate Value Object Type) .....             | 43        |
| 7.1.3.26. OccupiedCoolSetPoint (Analog Value Object Type) .....      | 44        |
| 7.1.3.27. OccupiedHeatSetPoint (Analog Value Object Type) .....      | 45        |
| 7.1.3.28. UnoccupiedCoolSetPoint (Analog Value Object Type) .....    | 46        |
| 7.1.3.29. UnoccupiedHeatSetPoint (Analog Value Object Type) .....    | 47        |
| 7.1.3.30. OccupancyContinuousCheck (Binary Value Object Type) .....  | 48        |
| 7.1.3.31. UnoccupiedDeadbandAction (Binary Value Object Type) .....  | 49        |
| 7.1.3.32. LockRemoteControl (Binary Value Object Type) .....         | 50        |
| 7.1.3.33. DIP_SW_S1_status (Analog Input Object Type) .....          | 51        |
| 7.1.3.34. DIP_SW_S2_status (Analog Input Object Type) .....          | 52        |
| 7.1.3.35. SerialNumber (Analog Input Object Type) .....              | 53        |
| 7.1.3.36. ResetBehaviour (Multistate Value Object Type) .....        | 54        |
| 7.2. Occupancy Function .....  | 55        |
| <b>8. Modbus Specifications .....</b>                                | <b>57</b> |
| 8.1. Implemented Modbus Functions .....                              | 57        |
| 8.1.1. Modbus Physical Layer .....                                   | 57        |
| 8.1.2. Modbus Registers .....  | 57        |
| <b>9. Ambient Temperature and Virtual Temperature Function .....</b> | <b>63</b> |
| 9.1. Considerations on Temperature Signals .....                     | 67        |
| <b>10. Error Codes .....</b>   | <b>69</b> |
| 10.1. Gateway Codes .....  | 69        |
| 10.2. AC System Codes .....  | 69        |

# 1. Description, Compatible AC systems, and Order Codes

## BACnet MS/TP and Modbus RTU Gateway for Hitachi Air Conditioners.

Compatible with commercial and VRF air conditioning systems commercialized by Hitachi.

Use the compatibility tool to get a complete list of compatible units: <https://compatibility.intesis.com/#>



### IMPORTANT

This gateway is compatible with Modbus from firmware version 1.0.2.0 onwards. If you need to update your gateway, please contact the support department at <https://support.hms-networks.com/hc/en-us>.

| ORDER CODE      | LEGACY ORDER CODE |
|-----------------|-------------------|
| IN485HIT001R000 | INMBSHIT001R000   |

## 2. General Information

### 2.1. Intended Use of the User Manual

This manual contains the main features of this Intesis gateway and the instructions for its appropriate installation, configuration, and operation.

The contents of this manual should be brought to the attention of any person who installs, configures, or operates this gateway or any associated equipment.

Keep this manual for future reference during the installation, configuration, and operation.

### 2.2. General Safety Information



#### IMPORTANT

Follow these instructions carefully. Improper work may seriously harm your health and damage the gateway and/or any other equipment connected to it.

Only technical personnel, following these instructions and the country legislation for installing electrical equipment, can install and manipulate this gateway.

Install this gateway indoors, in a restricted access location, avoiding exposure to direct solar radiation, water, high relative humidity, or dust.

Preferably, mount this gateway on a DIN rail inside a grounded metallic cabinet, following the instructions in this manual.

If mounting on a wall, firmly fix this gateway on a non-vibrating surface, following the instructions in this manual.

All wires (for communication and power supply, if needed) must only be connected to networks with indoor wiring. All communication ports are considered for indoor use and must only be connected to SELV circuits.

Disconnect all systems from power before manipulating and connecting them to the gateway.

Use SELV-rated NEC class 2 or limited power source (LPS) power supply.

Supply the correct voltage to power the gateway. The admitted range is detailed in the technical specifications table.

Respect the expected polarity of power and communication cables when connecting them to the gateway.

This Intesis gateway is designed for installation in an enclosure. When the device is mounted outside an enclosure, precautions should be taken to avoid electrostatic discharges to the unit in environments with static levels above 4 kV. When working in an enclosure (e.g., making adjustments, setting switches, etc.), typical anti-static precautions should be observed before touching the unit.

Binary inputs, if present, are potential-free contact. Do not connect any voltage.

Safety instructions in other languages can be found [here](#).

## 2.3. Admonition Messages and Symbols



### DANGER

Instructions that must be followed to avoid an imminently hazardous situation that, if not avoided, will result in death or severe injury.



### WARNING

Instructions that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in death or severe injury.



### CAUTION

Instruction that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in minor or moderate injury.



### IMPORTANT

Instruction that must be followed to avoid a risk of reduced functionality and/or damage to the equipment or to avoid a network security risk.



### NOTE

Additional information which may facilitate installation and/or operation.



### TIP

Helpful advice and suggestions.



### NOTICE

Remarkable Information.

### 3. Quickstart Guide for the IN485HIT001R000 Gateway



#### IMPORTANT

Disconnect all systems from power before connecting them to the gateway.

1. Mount the gateway in the desired installation site. This gateway can be mounted over a DIN rail, a wall, or inside the indoor unit (in some indoor unit models only). See details in [Mounting \(page 7\)](#).



#### NOTE

DIN rail mounting inside a grounded cabinet or metal enclosure is recommended.

2. Connect the gateway to the BACnet/Modbus network via its EIA-485 port.
3. Connect the gateway to the wired remote controller bus (AB). See details in [Connection Procedure \(page 8\)](#).
4. Configure the gateway using the built-in DIP switches. See details in [DIP Switches \(page 11\)](#).



#### NOTE

Use the SW1-5 (DIP switch 1, position 5) to set the gateway as a BACnet or Modbus server device:

- BACnet MS/TP: Position 5 is off (down). This is the default setting.
- Modbus RTU: Position 5 is on (up).

5. Check the communication performance between the BACnet/Modbus bus and the AC system through the gateway's LED indicators. See details in [LED Indicators \(page 13\)](#).
6. The Intesis gateway is ready to be used in your system.

## 4. Overview

**NOTE**

You can set the IN485HIT001R000 as a BACnet MS/TP or a Modbus RTU server gateway using the SW1-5 (DIP switch 1, position 5). See [DIP Switches \(page 11\)](#).

Figure 1. Integration of Hitachi AC units into a BACnet installation using the Intesis IN485HIT001R000 gateway

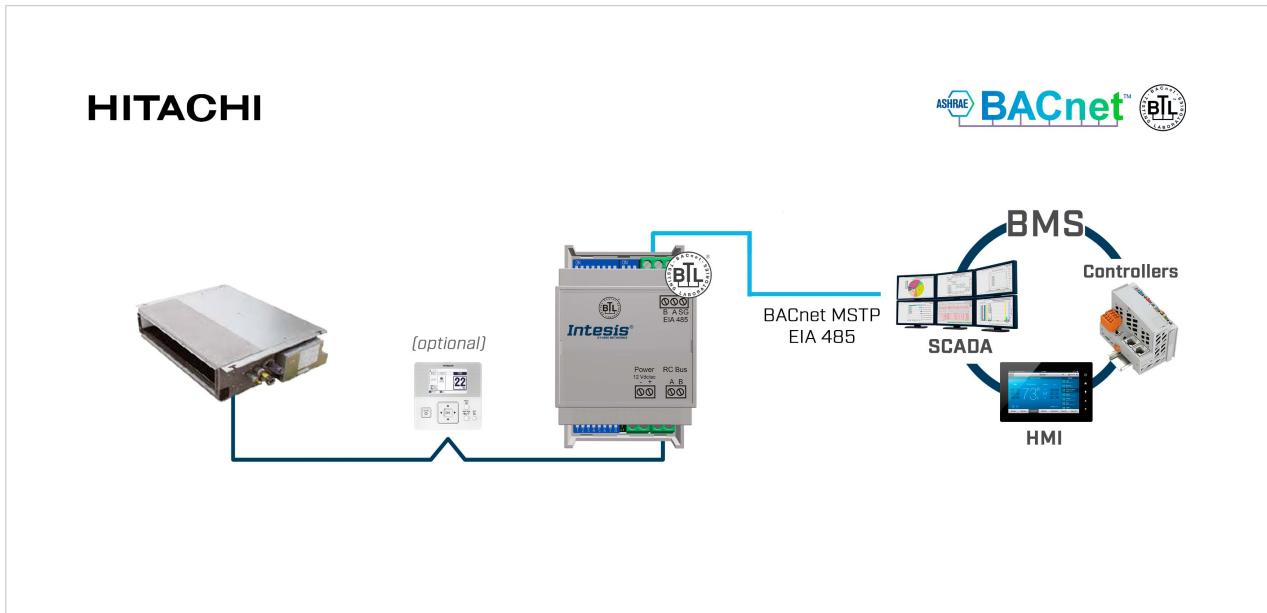
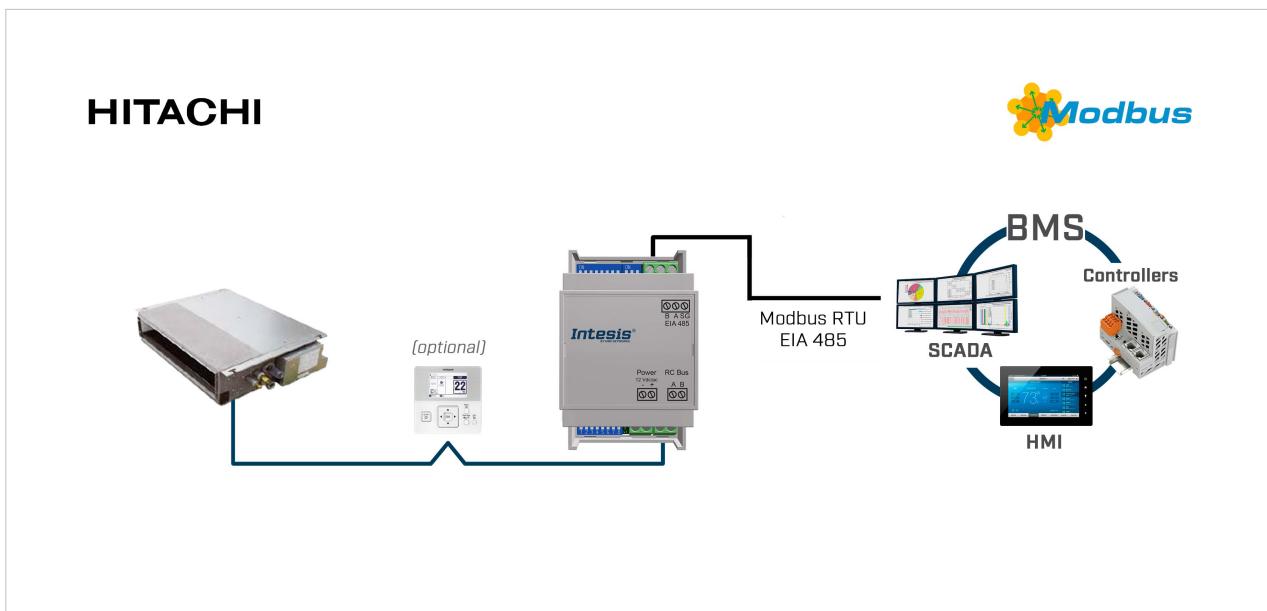


Figure 2. Integration of Hitachi AC units into a Modbus installation using the Intesis IN485HIT001R000 gateway

**NOTE**

This document assumes that the user is familiar with BACnet, Modbus, and Hitachi technologies and their technical terms.

## 4.1. Inside the Package

Items included:

- Intesis IN485HIT001R000 gateway
- Installation guide

## 4.2. Main Features

- BTL mark ensures full interoperability with BACnet devices.
- Supports BACnet MS/TP and Modbus RTU.
- Configuration with onboard DIP switches.
- Quick and easy installation: Set the DIP switches, plug, and play.
- External power supply not required.
- Simultaneous control of the AC unit by the remote controller and by BACnet MS/TP or Modbus RTU.
- Reduced dimensions: 93 x 53 x 58 mm.
- Mountable on DIN rail, wall, or even inside the indoor unit in some models of AC.
- Significant reduction of the HVAC system energy consumption.
- Three-year warranty.

## 4.3. Gateway Capacity

This Intesis gateway can integrate one or more Hitachi AC units and their associated elements.



### NOTE

You can connect several AC units to the gateway, but they will perform as one. This means you cannot send different commands to different units.

## 4.4. General Functionality

With this Intesis IN485HIT001R000 gateway, you can easily integrate Hitachi commercial and VRV air conditioning systems into an installation based on BACnet MS/TP or Modbus RTU. To do so, the gateway acts as a server device of the installation itself, accessing all signals from the AC indoor unit.

The gateway is continuously polling the AC unit, storing in its memory the current status of every signal you want to track and serving this data to the installation when requested. The gateway also sends the requested commands to the indoor unit.

## 5. Hardware

### 5.1. Mounting

Mount the gateway inside the AC indoor unit, over a wall, or over a DIN rail.



#### IMPORTANT

Do not mount the gateway in air-handling units or conducts.



#### NOTE

DIN rail mounting inside a grounded metallic cabinet is recommended.

#### Mounting the gateway inside the AC indoor unit

1. Look for the proper place to mount the gateway, taking into consideration the following:




#### IMPORTANT

- Keep communication cables away from power and ground wires.
- Ensure the gateway does not block any mobile parts of the AC unit.

2. Place the gateway on top of a secure, plain surface.
3. Use double-sided tape to ensure a secure fixing if needed.

#### Wall mounting

1. Press the rear panel clips outwards until you hear a *click*.
2. Use the clip holes to screw the gateway to the wall.
3. Make sure the gateway is firmly fixed.

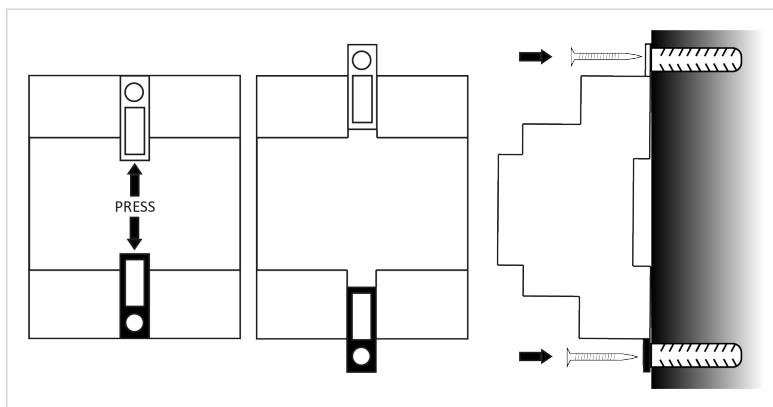


#### DIN rail mounting

Keep the clips in its original position.

1. Fit the gateway's top-side clip in the upper edge of the DIN rail.
2. Press the low side of the gateway gently to lock it in the DIN rail.
3. Make sure the gateway is firmly fixed.

**NOTE**

For some DIN rails, to complete step 2, you may need a small screwdriver or similar to pull the bottom clip down.

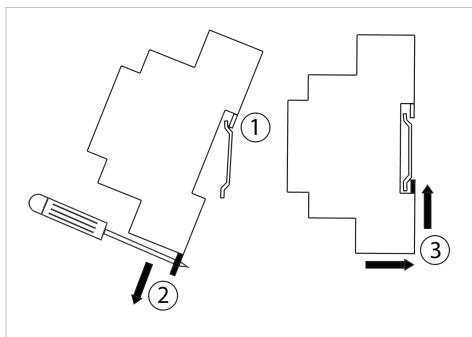

## 5.2. Connection Procedure


**CAUTION**

Disconnect all systems from power before connecting them to the gateway.

**IMPORTANT**

Keep communication cables away from power and ground wires.

*Figure 3. Wiring diagram*

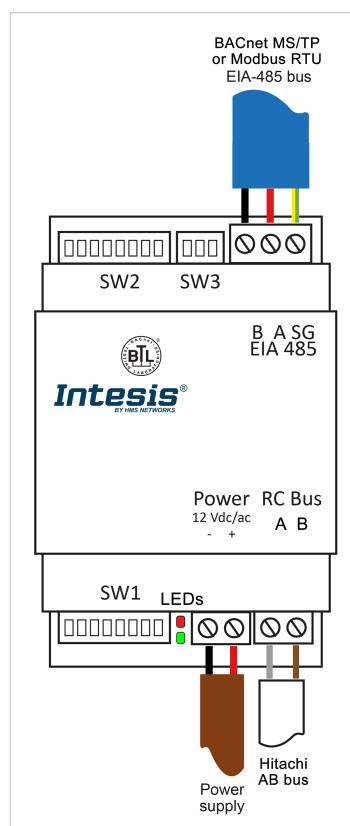

### Connection to the wired remote controller (RC) bus



#### NOTE

Mount the gateway in the desired place before wiring it.

1. Connect the gateway at any point of the AB bus.



#### NOTE

- The AB bus is a two-wire bus used to connect the indoor unit and a wired RC.
- This connection has no specific polarity.
- Maximum length for the RC bus is 500 m (1640,42 ft).

### Connection to the BACnet MS/TP or Modbus RTU bus

2. Connect the BACnet MS/TP or Modbus RTU bus to the EIA-485 port of the gateway.



#### IMPORTANT

Observe polarity: B-, A+, and SG for signal ground.



#### IMPORTANT

- EIA-485 bus doesn't allow loop or star topologies.
- Maximum length for the EIA-485 bus is 1200 meters (3937 feet).

3. Reconnect all systems to power.

## 5.3. Coexistence of the Gateway with a Remote Controller

If there is a wired remote controller (RC) connected to the indoor unit, you must set the roles for both the wired RC and the gateway:

- Set the wired RC as the header<sup>1</sup> and the gateway as the follower<sup>1</sup>.
- Set the wired RC as the follower and the gateway as the header.



#### NOTE

<sup>1</sup> We use the terms header and follower to designate the roles also known as master and slave or main and sub.



#### NOTE

By default, the factory settings designate the gateway as the follower. Use the SW1-1 (DIP switch 1, position 1) to configure the gateway's role. See [DIP Switches \(page 11\)](#).



#### NOTE

Refer to the documentation provided with the Hitachi indoor unit to know the needed procedure to set the role of the wired RC.



#### IMPORTANT

If no wired RC is present in the installation, set the gateway as the header.

**NOTE**

Although it is not mandatory, we recommend connecting a wired RC in the bus since it may be necessary to establish proper communication between the gateway and some indoor units.

**IMPORTANT**

The roles of the gateway and the wired RC affect certain functions, such as using a temperature sensor from the BMS side or the Virtual Temperature function. To know more, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

## 5.4. Connection to an External Power Supply

**IMPORTANT**

In most cases, this gateway is powered through the remote controller bus itself, and there is no need to connect an external power supply. However, depending on the number and type of remote controllers installed, the bus could not supply the needed power.

**TIP**


Some signs indicating there is not enough power in the bus may include, for example, a malfunction of the remote controllers' display or in its performance.

If that's the case, connect a 12 VDC/AC SELV-rated NEC class 2 or Limited Power Source (LPS) power supply in the gateway's Power connector.

**IMPORTANT**

Respect polarity.

Figure 4. Power connector

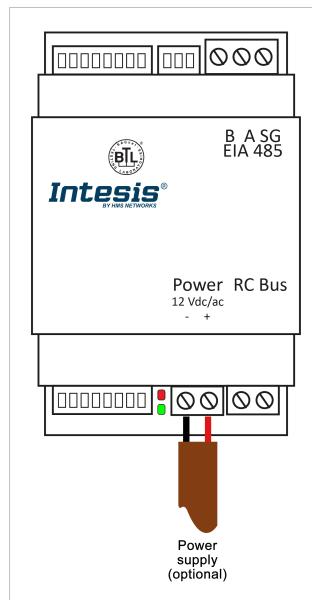

## 5.5. DIP Switches

The gateway includes three DIP switches: SW1 (8 switches) at the bottom and SW2 (8 switches) and SW3 (3 switches) at the top.

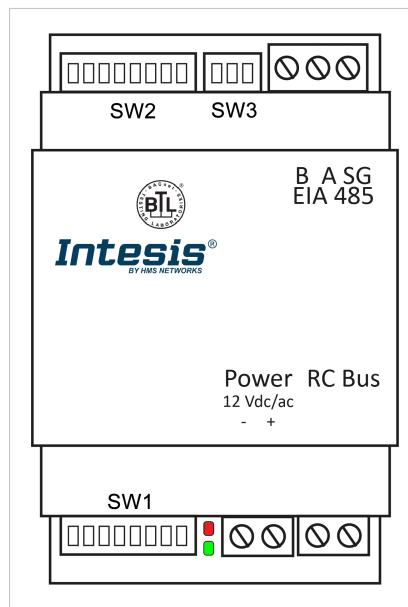


Table 1. **SW1** (P1, P2, P5): Gateway configuration; (P6 to P8): BACnet MS/TP or Modbus RTU baudrate

| Binary value | Position |    |   |   |     |     |     |     | Description                                |  |   |
|--------------|----------|----|---|---|-----|-----|-----|-----|--|--|---|
|              | 1        | 2  | 3 | 4 | 5   | 6   | 7   | 8   |  |  |   |
| 0XXXXXXX     | OFF      | X  | X | X | X   | X   | X   | X   | Follower in RC bus (default)               |  | Follower in RC bus (default)              |
| 1XXXXXXX     | ON       | X  | X | X | X   | X   | X   | X   | Header in RC bus                           |  | Header in RC bus                          |
| 01XXXXXX     | OFF      | ON | X | X | X   | X   | X   | X   | -  |  | -   |
| 11XXXXXX     | ON       | ON | X | X | X   | X   | X   | X   | -  |  | -   |
| XXXX0XXX     | X        | X  | X | X | OFF | X   | X   | X   | BACnet MS/TP in 485 port enabled (default) |  | Modbus RTU in 485 port disabled (default) |
| XXXX1XXX     | X        | X  | X | X | ON  | X   | X   | X   | BACnet MS/TP in 485 port disabled          |  | Modbus RTU in 485 port enabled            |
| XXXXX000     | X        | X  | X | X | X   | OFF | OFF | OFF | Autobaudrate (default)                     |  | 2400 bps                                  |
| XXXXX100     | X        | X  | X | X | X   | ON  | OFF | OFF | 9600 bps                                   |  | 4800 bps                                  |
| XXXXX010     | X        | X  | X | X | X   | OFF | ON  | OFF | 19200 bps                                  |  | 9600 bps                                  |
| XXXXX110     | X        | X  | X | X | X   | ON  | ON  | OFF | 38400 bps                                  |  | 19200 bps                                 |
| XXXXX001     | X        | X  | X | X | X   | OFF | OFF | ON  | 57600 bps                                  |  | 38400 bps                                 |
| XXXXX101     | X        | X  | X | X | X   | ON  | OFF | ON  | 76800 bps                                  |  | 57600 bps                                 |
| XXXXX011     | X        | X  | X | X | X   | OFF | ON  | ON  | 115200 bps                                 |  | 76800 bps                                 |
| XXXXX111     | X        | X  | X | X | X   | ON  | ON  | ON  | Autobaudrate                               |  | 115200 bps                                |



### NOTE

If **Autobaudrate** is selected, the gateway will scan the network to find any other BACnet MS/TP device and will match its baudrate. Once detected, the baudrate will only be modified after a reset/reboot of the gateway.

Table 2. **SW2 (BACnet MS/TP)** (P1 to P7): BACnet MS/TP MAC address; (P8): Temperature unit (°C/°F)

| Binary value | Position |     |     |     |     |     |     |     | BACnet address | Description                      |
|--------------|----------|-----|-----|-----|-----|-----|-----|-----|----------------|----------------------------------|
|              | 1        | 2   | 3   | 4   | 5   | 6   | 7   | 8   |                |                                  |
| 0000000X     | OFF      | OFF | OFF | OFF | OFF | OFF | OFF | X   | 0              | -                                |
| 1000000X     | ON       | OFF | OFF | OFF | OFF | OFF | OFF | X   | 1              | -                                |
| 0100000X     | OFF      | ON  | OFF | OFF | OFF | OFF | OFF | X   | 2              | -                                |
| 1100000X     | ON       | ON  | OFF | OFF | OFF | OFF | OFF | X   | 3              | -                                |
| ...          | ...      |     |     |     |     |     |     |     | ...            | -                                |
| 1011111X     | ON       | OFF | ON  | ON  | ON  | ON  | ON  | X   | 125            | -                                |
| 0111111X     | OFF      | ON  | ON  | ON  | ON  | ON  | ON  | X   | 126            | -                                |
| 1111111X     | ON       | ON  | ON  | ON  | ON  | ON  | ON  | X   | 127            | -                                |
| XXXXXX0      | X        | X   | X   | X   | X   | X   | X   | OFF | -              | Temperature in Celsius (default) |
| XXXXXX1      | X        | X   | X   | X   | X   | X   | X   | ON  | -              | Temperature in Fahrenheit        |

Table 3. **SW2 (Modbus RTU)** (P1 to P6): Modbus server address; (P7): Degree decimals setting; (P8): Temperature unit (°C/°F)

| Binary value | Position |     |     |     |     |     |     |     | Modbus address | Description                                    |
|--------------|----------|-----|-----|-----|-----|-----|-----|-----|----------------|--|
|              | 1        | 2   | 3   | 4   | 5   | 6   | 7   | 8   |                |  |
| 100000XX     | ON       | OFF | OFF | OFF | OFF | OFF | X   | X   | 1              | -  |
| 010000XX     | OFF      | ON  | OFF | OFF | OFF | OFF | X   | X   | 2              | -  |
| 110000XX     | ON       | ON  | OFF | OFF | OFF | OFF | X   | X   | 3              | -  |
| ...          | ...      |     |     |     |     |     |     |     | ...            | -  |
| 101111XX     | ON       | OFF | ON  | ON  | ON  | ON  | X   | X   | 61             | -  |
| 011111XX     | OFF      | ON  | ON  | ON  | ON  | ON  | X   | X   | 62             | -  |
| 111111XX     | ON       | ON  | ON  | ON  | ON  | ON  | X   | X   | 63             | -  |
| XXXXXX0X     | X        | X   | X   | X   | X   | X   | OFF | X   | -              | Temperature in degrees x1 (default)            |
| XXXXXX1X     | X        | X   | X   | X   | X   | X   | ON  | X   | -              | Temperature in degrees x10. Example: 19.2°=192 |
| XXXXXX0      | X        | X   | X   | X   | X   | X   | X   | OFF | -              | Temperature in Celsius (default)               |
| XXXXXX1      | X        | X   | X   | X   | X   | X   | X   | ON  | -              | Temperature in Fahrenheit                      |

Table 4. **SW3** (P1 to P3): BACnet/Modbus polarization and termination resistor


| Binary value | Position |     |     | Description  |
|--------------|----------|-----|-----|--|
|              | 1        | 2   | 3   |  |
| 0 XX         | OFF      | X   | X   | EIA-485 bus without termination resistor. The gateway is not at one end of the EIA-485 bus (default value) |
| 1 XX         | ON       | X   | X   | 120 Ω termination resistor active. The gateway is at one end of the EIA-485 bus                            |
| X 0 0        | X        | OFF | OFF | No bus polarization (default value)  |
| X 1 1        | X        | ON  | ON  | Bus polarization active  |

**IMPORTANT**Observe the **ON** indicator on each DIP switch as a reference.**IMPORTANT**

The DIP switch configuration will only take effect after rebooting the gateway.

## 5.6. LED Indicators

There are two LEDs at the lower side of the gateway, between the DIP switch block SW1 and the **Power** connector.

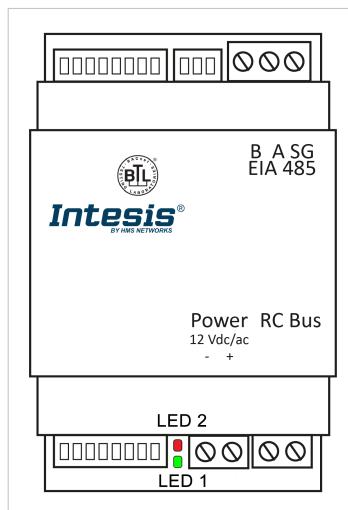

When powering the gateway up, both LEDs blink once and then turn off. After that, LEDs will behave as described in the table below:

| LED   | Status     | Description                                     |
|---|------------|---|
| <b>When the gateway is set for BACnet MS/TP</b> |            |   |
| L1<br>Green                                     | ON         | EIA-485 bus link performed                      |
|   | Flickering | Activity on the EIA-485 bus                     |
|   | OFF        | EIA-485 bus link not performed                  |
| L2<br>Red                                       | ON         | AC communication error                          |
|   | Blinking   | AC unit error                                   |
|   | Flashing   | AC communication OK                             |
| <b>When the gateway is set for Modbus RTU</b>   |            |   |
| L1<br>Green                                     | Blinking   | Communication error<br>Any error in the AC unit |
|   | Flashing   | Normal operation                                |
| L1 Green<br>+<br>L2 Red                         | Pulse      | Gateway startup                                 |



### LED PATTERNS

- **ON:** 100% on
- **Flickering:** irregular cycle (90% on - 10% off approx)
- **Blinking:** 50% on - 50% off
- **Flashing:** 10% on - 90% off
- **OFF:** 100% off

## 5.7. Technical Specifications

|   |  |
|---|--|
| <b>Housing</b>                                    | Plastic, type PC (UL 94 V-0)<br>Net dimensions (HxWxD): 93 x 53 x 58 mm / 3.7 x 2.1 x 2.3"<br>Color: Light grey. RAL 7035  |
| <b>Weight</b>                                     | 85 g (3 oz)  |
| <b>Terminal wiring</b>                            | Wire cross-section/gauge per terminal:<br><br>One core: 0.2 .. 2.5 mm <sup>2</sup> (24 .. 11 AWG)<br>Two cores: 0.2 .. 1.5mm <sup>2</sup> (24 .. 15 AWG)<br>Three cores: Not permitted<br><br>Use solid or stranded wires (twisted or with ferrule). |
| <b>External power supply (optional)</b>           | SELV-rated NEC class 2 or limited power source (LPS) power supply. 12 VDC/AC; 0.1 A  |
| <b>Mounting</b>                                   | Wall, DIN rail, or inside the indoor unit  |
| <b>EIA-485 port<br/>BACnet MS/TP - Modbus RTU</b> | 1 x pluggable terminal block (3 poles: B, A, and SG)   |
| <b>AC unit port</b>                               | 1 x RC bus pluggable terminal block (2 poles)  |
| <b>LED indicators</b>                             | 2 x Communication status   |
| <b>DIP switches</b>                               | SW1: Gateway and baudrate configuration<br>SW2: BACnet/Modbus address and temperature unit<br>SW3: Bus polarization and termination  |
| <b>Operational and storage temperature</b>        | Celsius: Op: 0 to +70°C; St: -20 to 85°C<br>Fahrenheit: Op: 32 to 158°F; St: -4 to 185°F   |
| <b>Operational and storage humidity</b>           | 5% to 95% RH non-condensing  |
| <b>Isolation Voltage</b>                          | 1500 VDC   |
| <b>Isolation resistance</b>                       | 1000 MΩ  |

## 5.8. Dimensions

### Net dimensions (HxWxD):


Millimeters: 93 x 53 x 58 mm

Inches: 3.66 x 2.08 x 2.28"



### IMPORTANT

Leave enough clear space to wire the gateway easily and for the subsequent manipulation of elements such as connectors, DIP switches, etc.

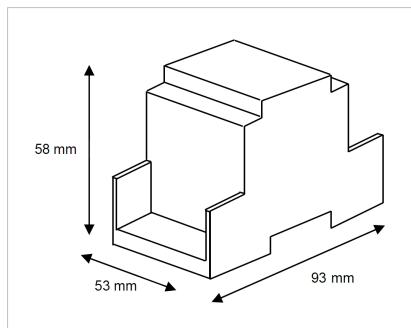

## 6. Restore the Factory Settings

To restore the gateway to its factory settings, proceed as follows:

1. Set all switches from DIP switches SW1 and SW2 to the ON position.
2. Reboot the gateway:
  - a. Power it OFF.
  - b. Power it ON.



### NOTE

To turn the gateway OFF, disconnect it from the AC unit and from the power supply, if there is one. To turn the gateway ON, reestablish those connections.

3. After the reboot, LEDs will blink with the SOS Morse sequence:
  - a. Three short blinks
  - b. Three longer blinks
  - c. Three short blinks
4. Set all switches from DIP switches SW1 and SW2 DIP to the OFF position before 30 seconds pass.



### IMPORTANT

If you take longer than 30 seconds, all LEDs will turn off, meaning that the procedure has failed. To retry it, go to step 1 and begin the procedure again.

After this procedure, the LED will flash red, meaning that the gateway is already restored to the factory settings.

To continue working with the gateway, proceed as usual:

1. Set the DIP switches again depending on the desired configuration.
2. Reset the device:
  - a. Power it OFF.
  - b. Power it ON.

## 7. BACnet Specifications

The following sections provide the gateway's specifications when it is set for BACnet MS/TP.

### 7.1. Objects

#### 7.1.1. Supported Object Types

| Object type       | ID |
|-------------------|----|
| Analog-Input      | 0  |
| Analog-Output     | 1  |
| Analog-Value      | 2  |
| Binary-Input      | 3  |
| Binary-Output     | 4  |
| Binary-Value      | 5  |
| Device            | 8  |
| Multistate-Input  | 13 |
| Multistate-Output | 14 |
| Multistate-Value  | 19 |

#### 7.1.2. Member Objects

##### 7.1.2.1. Type: Gateway

| Object name     | Description                        | Object type | Object instance  |
|-----------------|------------------------------------|-------------|------------------|
| IN485HIT001R000 | Hitachi commercial and VRF gateway | Device      | 246000 (default) |

##### 7.1.2.2. Type: Indoor Unit

| Object name             | Object type | Object instance |
|-------------------------|-------------|-----------------|
| OnOff_status            | BI          | 0               |
| OnOff_command           | BO          | 0               |
| Mode_status             | MI          | 0               |
| Mode_command            | MO          | 0               |
| SetPoint_status         | AI          | 0               |
| User_Setpoint_status    | AI          | 17              |
| Setpoint_command        | AO          | 0               |
| VirtualTempActive       | BI          | 14              |
| FanSpeed_status         | MI          | 1               |
| FanSpeed_command        | MO          | 1               |
| AirDirectionUD_status   | MI          | 2               |
| AirDirectionUD_command  | MO          | 2               |
| RoomTemperature_status  | AI          | 1               |
| RoomTemperature_command | AO          | 1               |
| ErrorCode               | AI          | 2               |
| ErrorCodeM              | MI          | 4               |
| ErrorActive             | BI          | 1               |
| ErrorAddress            | AI          | 2               |
| ErrorReset              | BO          | 5               |

| Object name              | Object type | Object instance |
|--------------------------|-------------|-----------------|
| OnTimeCounter            | AV          | 0               |
| FilterSign               | BI          | 6               |
| FilterSingAddress        | AI          | 18              |
| FilterReset              | BO          | 4               |
| Occupancy                | MV          | 0               |
| OccupiedCoolSetpoint     | AV          | 1               |
| OccupiedHeatSetpoint     | AV          | 2               |
| UnoccupiedCoolSetpoint   | AV          | 3               |
| UnoccupiedHeatSetpoint   | AV          | 4               |
| OccupancyContinuousCheck | BV          | 0               |
| UnoccupiedDeadBandAction | BV          | 1               |
| LockRemoteControl        | BV          | 2               |
| SerialNumber             | AI          | 11              |
| DIP_SW_S1_status         | AI          | 9               |
| DIP_SW_S2_status         | AI          | 10              |
| ResetBehavior            | MV          | 4               |

### 7.1.3. Objects and Properties

#### 7.1.3.1. Hitachi AC Gateway (Device Object Type)

**Object\_Identifier:** The gateway can be identified in the BACnet network automatically or manually:

- **Automatic addressing (default):** This mode uses a base address of 246000 + the MAC address number selected in the DIP switch SW2.
- **Manual addressing:** The gateway switches to this mode when this property receives a value from the BACnet side.



#### IMPORTANT

During the manual addressing mode, the gateway will not consider the MAC address configured with the DIP switch SW2.



#### IMPORTANT

If the **Object\_Identifier** is overwritten from the BACnet side, the DIP switch SW2 configuration will not be considered for the Device instance calculation until the gateway is reset to the factory settings. See [Restore the Factory Settings \(page 15\)](#).

**Object\_name:** In the **Device Object**, is configurable writing directly on this property.

**Description:** In the **Device Object**, is configurable writing directly on the property. Max. length: 63 characters.

| Property Identifier             | Property Datatype                        | Value   | ASHRAE | Gateway |
|---------------------------------|--|---|--------|---------|
| Object_Identifier               | BACnetObjectIdentifier                   | Device, 246000 (default value)                                    | R      | W       |
| Object_Name                     | CharacterString                          | IN485HIT001R000   | R      | W       |
| Object_Type                     | BACnetObjectType                         | DEVICE (8) (Device Object Type)                                   | R      | R       |
| System_Status                   | BACnetDeviceStatus                       | OPERATIONAL (0)   | R      | R       |
| Vendor_Name                     | CharacterString                          | HMS Industrial Networks SLU                                       | R      | R       |
| Vendor_Identifier               | Unsigned16                               | 246   | R      | R       |
| Model_Name                      | CharacterString                          | IN485HIT001R000   | R      | R       |
| Firmware_Revision               | CharacterString                          | 1.0.0.0   | R      | R       |
| Application_Software_Version    | CharacterString                          | 1.0.0.0   | R      | R       |
| Location                        | CharacterString                          | ""  | O      | -       |
| Description                     | CharacterString                          | RC interface<br>Hitachi AC interface                              | O      | W       |
| Protocol_Version                | Unsigned                                 | 1   | R      | R       |
| Protocol_Revision               | Unsigned                                 | 12  | R      | R       |
| Protocol_Services_Supported     | BACnetServiceSupported                   | -   | R      | R       |
| Protocol_Object_Types_Supported | BACnetObjectTypes Supported              | Refer to section <a href="#">Supported Object Types (page 16)</a> | R      | R       |
| Object_List                     | BACnetArray[N] of BACnetObjectIdentifier | BACnetARRAY[N]  | R      | R       |
| Structured_Object_List          | BACnetArray[N] of BACnetObjectIdentifier | -   | O      | -       |
| Max_APDU_Length_Accepted        | Unsigned                                 | 480 for MS/TP   | R      | R       |
| Segmentation_Supported          | BACnetSegmentation                       | SEGMENTED-BOTH (0)  | R      | R       |
| Max_Segments_accepted           | Unsigned                                 | 16  | O      | R       |
| VT_Classes_Supported            | List of BACnetVTClass                    | -   | O      | -       |
| Active_VT_Sessions              | List of BACnetVTSes                      | -   | O      | -       |
| Local_Date                      | Date                                     | -   | O      | -       |
| Local_Time                      | Time                                     | -   | O      | -       |

| Property Identifier                 | Property Datatype                        | Value                         | ASHRAE | Gateway |
|-------------------------------------|--|-------------------------------|--------|---------|
| UTC_Offset                          | INTEGER                                  | -                             | O      | -       |
| Daylight_Savings_Status             | BOOLEAN                                  | -                             | O      | -       |
| APDU_Segment_Timeout                | Unsigned                                 | 3000                          | R      | R       |
| APDU_Timeout                        | Unsigned                                 | 3000                          | R      | R       |
| Number_of_APDU_Retries              | Unsigned                                 | 3                             | R      | R       |
| List_Of_Session_Keys                | List of BACnetSessionKey                 | -                             | O      | -       |
| Time_Synchronization_Recipients     | List of BACnetRecipient                  | -                             | O      | -       |
| Max_Master                          | Unsigned                                 | 32                            | R      | W       |
| Max_Info_Frames                     | Unsigned                                 | 1                             | O      | R       |
| Device_Address_Binding              | List of BACnetAddressBinding             | NULL (empty)                  | R      | R       |
| Database_Revision                   | Unsigned                                 | 0                             | R      | R       |
| Configuration_Files                 | BACnetArray[N] of BACnetObjectIdentifier | -                             | O      | -       |
| Last_Restore_Time                   | BACnetTimeStamp                          | -                             | O      | -       |
| Backup_Failure_Timeout              | Unsigned16                               | -                             | O      | -       |
| Active_COV_Subscriptions            | List of BACnetCOVSubscription            | List of BACnetCOVSubscription | O      | R       |
| Slave_Proxy_Enable                  | BACnetArray[N] of BOOLEAN                | -                             | O      | -       |
| Manual_Slave_Address_Binding        | List of BACnetAddressBinding             | -                             | O      | -       |
| Auto_Slave_Discovery                | BACnetArray[N] of BOOLEAN                | -                             | O      | -       |
| Slave_Address_Binding               | BACnetAddressBinding                     | -                             | O      | -       |
| Last_Restart_Reason                 | BACnetRestartReason                      | -                             | O      | -       |
| Time_Of_Device_Restart              | BACnetTimeStamp                          | -                             | O      | -       |
| Restart_Notification_Recipients     | List of BACnetRecipient                  | -                             | O      | -       |
| UTC_Time_Synchronization_Recipients | List of BACnetRecipient                  | -                             | O      | -       |
| Time_Synchronization_Interval       | Unsigned                                 | -                             | O      | -       |
| Align_Intervals                     | BOOLEAN                                  | -                             | O      | -       |
| Interval_Offset                     | Unsigned                                 | -                             | O      | -       |
| Profile_Name                        | CharacterString                          | -                             | O      | -       |

### 7.1.3.2. OnOff\_status (Binary Input Object Type)

It indicates if the indoor unit is turned on or off.

| Property Identifier       | Property Datatype                 | Value                                       | ASHRAE | Gateway |
|---------------------------|-----------------------------------|---|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Input, 0)                           | R      | R       |
| Object_Name               | CharacterString                   | OnOff_status                                | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_INPUT (3)                            | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)                   | R      | R       |
| Description               | CharacterString                   | -   | O      | -       |
| Device_Type               | CharacterString                   | -   | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}           | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)                            | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7) | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                                       | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                                  | R      | R       |
| Inactive_Text             | CharacterString                   | Off   | O      | R       |
| Active_Text               | CharacterString                   | On  | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -   | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -   | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -   | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -   | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -   | O      | -       |
| Time_Delay                | Unsigned                          | -   | O      | -       |
| Notification_Class        | Unsigned                          | -   | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -   | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name              | CharacterString                   | -   | O      | -       |

### 7.1.3.3. OnOff\_command (Binary Output Object Type)

It turns the indoor unit on or off.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Output, 0)           | R      | R       |
| Object_Name               | CharacterString                   | OnOff_command                | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_OUTPUT (4)            | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | W       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                   | R      | R       |
| Inactive_Text             | CharacterString                   | Off                          | O      | R       |
| Active_Text               | CharacterString                   | On                           | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | R       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | R       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Feedback_Value            | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.4. Mode\_status (Multistate Input Object Type)

It indicates the indoor unit's current mode.

| Property Identifier | Property Datatype                 | Value                                      | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Input, 0)                      | R      | R       |
| Object_Name         | CharacterString                   | Mode_status                                | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_INPUT (13)                      | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 5                                     | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}          | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                           | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER(7) | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE                                      | R      | R       |
| Number_Of_States    | Unsigned                          | 5  | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Mode status table</b> below.  | O      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Alarm_Values        | List of Unsigned                  | -  | O      | -       |
| Fault_Values        | List of Unsigned                  | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 5. Mode status

| Present_Value | State_Text |
|---------------|------------|
| 1             | Heat       |
| 2             | Cool       |
| 3             | Fan        |
| 4             | Dry        |
| 5             | Auto       |



#### NOTE

When setting the control mode in Auto, the AC unit itself decides the appropriate status.

### 7.1.3.5. Mode\_command (Multistate Output Object Type)

It sets the AC indoor unit's mode.

| Property Identifier | Property Datatype                 | Value                                     | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Output,0)                     | R      | R       |
| Object_Name         | CharacterString                   | Mode_command                              | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_OUTPUT (14)                    | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 5                                    | R      | W       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}              | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                          | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                     | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE                                     | R      | R       |
| Number_Of_States    | Unsigned                          | 5   | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Mode command table</b> below | O      | R       |
| Priority_Array      | BACnetPriorityArray               | BACnetPriorityArray                       | R      | R       |
| Relinquish_Default  | Unsigned                          | 1   | R      | R       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| Feedback_Value      | Unsigned                          | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |

Table 6. Mode command

| Present_Value | State_Text |
|---------------|------------|
| 1             | Heat       |
| 2             | Cool       |
| 3             | Fan        |
| 4             | Dry        |
| 5             | Auto       |



#### NOTE

When setting the control mode in Auto, the AC unit itself decides the appropriate status.

### 7.1.3.6. Setpoint\_status (Analog Input Object Type)

It reports the temperature setpoint requested to the indoor unit.



#### NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 0)  | R      | R       |
| Object_Name         | CharacterString                   | SetPoint_status  | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)   | R      | R       |
| Present_Value       | REAL                              | Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F<br>Heat: 17 .. 30°C / 62.6 .. 86°F | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}  | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)   | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)                                | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE  | R      | R       |
| Update_Interval     | Unsigned                          | -  | O      | -       |
| Units               | BACnetEngineeringUnits            | Celsius degrees (62)<br>Fahrenheit degrees (64)                            | R      | R       |
| Min_Pres_Value      | REAL                              | 17°C / 62.6°F  | O      | R       |
| Max_Pres_Value      | REAL                              | 30°C / 86°F  | O      | R       |
| Resolution          | REAL                              | -  | O      | -       |
| COV_Increment       | REAL                              | 0  | O      | W       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| High_Limit          | REAL                              | -  | O      | -       |
| Low_Limit           | REAL                              | -  | O      | -       |
| Deadband            | REAL                              | -  | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit via the DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.7. UserSetpoint\_status (Analog Input Object Type)

It reports the value written in the Setpoint\_command object.



#### NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 17)   | R      | R       |
| Object_Name         | CharacterString                   | UserSetPoint_status  | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)   | R      | R       |
| Present_Value       | REAL                              | Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F<br>Heat: 17 .. 30°C / 62.6 .. 86°F | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}   | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)   | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)<br>UNRELIABLE_OTHER (7)                              | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE  | R      | R       |
| Update_Interval     | Unsigned                          | 300  | O      | -       |
| Units               | BACnetEngineeringUnits            | Celsius degrees (62)<br>Farenheit degrees (64)                             | R      | R       |
| Min_Pres_Value      | REAL                              | 17°C / 62.6°F  | O      | -       |
| Max_Pres_Value      | REAL                              | 30°C / 86°F  | O      | -       |
| Resolution          | REAL                              | -  | O      | -       |
| COV_Increment       | REAL                              | 0  | O      | W       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| High_Limit          | REAL                              | -  | O      | -       |
| Low_Limit           | REAL                              | -  | O      | -       |
| Deadband            | REAL                              | -  | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.8. Setpoint\_command (Analog Output Object Type)

It is used to request a temperature setpoint from the BACnet side.



#### NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Output, 0)   | R      | R       |
| Object_Name         | CharacterString                   | SetPoint_command   | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_OUTPUT (1)  | R      | R       |
| Present_Value       | REAL                              | Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F<br>Heat: 17 .. 30°C / 62.6 .. 86°F   | W      | W       |
|                     |                                   | <div style="background-color: #f0f0f0; padding: 5px;"> <b>NOTE</b><br/>           This range may change depending on the indoor unit.         </div> |        |         |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}   | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)   | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)  | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE  | R      | R       |
| Update_Interval     | Unsigned                          | -  | O      | -       |
| Units               | BACnetEngineeringUnits            | Celsius degrees (62)<br>Fahrenheit degrees (64)  | R      | R       |
| Min_Pres_Value      | REAL                              | 17°C / 62.6°F  | O      | R       |
| Max_Pres_Value      | REAL                              | 30°C / 86°F  | O      | R       |
| Resolution          | R                                 | -  | O      | -       |
| COV_Increment       | REAL                              | 0  | O      | W       |
| Priority_Array      | BACnetPriorityArray               | BACnetPriorityArray  | R      | R       |
| Relinquish_Default  | Unsigned                          | 22   | R      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| High_Limit          | REAL                              | -  | O      | -       |
| Low_Limit           | REAL                              | -  | O      | -       |
| Deadband            | REAL                              | -  | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.9. VirtualTemperatureActive (Binary Input Object Type)

It indicates if the Virtual Temperature function is active or inactive.



#### NOTE

The Virtual Temperature function allows the gateway to set the reference temperature using the value reported by a sensor connected to the BMS.

For more information, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

| Property Identifier       | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------------|-----------------------------------|---|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Input, 14)                            | R      | R       |
| Object_Name               | CharacterString                   | VirtualTempActive                             | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_INPUT (3)                              | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)                     | R      | R       |
| Description               | CharacterString                   | -   | O      | -       |
| Device_Type               | CharacterString                   | -   | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                  | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)                              | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)<br>UNRELIABLE_OTHER (7) | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE   | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                                    | R      | R       |
| Inactive_Text             | CharacterString                   | No  | O      | R       |
| Active_Text               | CharacterString                   | Yes   | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -   | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -   | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -   | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -   | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -   | O      | -       |
| Time_Delay                | Unsigned                          | -   | O      | -       |
| Notification_Class        | Unsigned                          | -   | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -   | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name              | CharacterString                   | -   | O      | -       |

### 7.1.3.10. FanSpeed\_status (Multistate Input Object Type)

It indicates the indoor unit's fan speed.

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Input, 1)                          | R      | R       |
| Object_Name         | CharacterString                   | FanSpeed_status                                | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_INPUT (13)                          | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 5   | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}              | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                               | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)    | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE/TRUE                                     | R      | R       |
| Number_Of_States    | Unsigned                          | 5  | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Fan speed status table</b> below. | O      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Alarm_Values        | List of Unsigned                  | -  | O      | -       |
| Fault_Values        | List of Unsigned                  | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 7. Fan speed status

| Present_Value | State_Text  |
|---------------|-------------|
| 1             | Auto        |
| 2             | Fan Speed 1 |
| 3             | Fan Speed 2 |
| 4             | Fan Speed 3 |
| 5             | Fan Speed 4 |

### 7.1.3.11. FanSpeed\_command (Multistate Output Object Type)

It sets the indoor unit's fan speed.

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Output, 1)                         | R      | R       |
| Object_Name         | CharacterString                   | FanSpeed_command                               | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_OUTPUT (14)                         | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 5   | R      | W       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                   | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                               | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                          | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE  | R      | R       |
| Number_Of_States    | Unsigned                          | 5  | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Fan speed command table</b> below | O      | R       |
| Priority_Array      | BACnetPriorityArray               | BACnetPriorityArray                            | R      | R       |
| Relinquish_Default  | Unsigned                          | 1  | R      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Feedback_Value      | Unsigned                          | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 8. Fan speed command

| Present_Value | State_Text  |
|---------------|-------------|
| 1             | Auto        |
| 2             | Fan Speed 1 |
| 3             | Fan Speed 2 |
| 4             | Fan Speed 3 |
| 5             | Fan Speed 4 |
| 6             | Fan Speed 5 |

### 7.1.3.12. AirDirectionUD\_status (Multistate Input Object Type)

It indicates the indoor unit's vertical air direction (up-down) status.

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Input, 2)                              | R      | R       |
| Object_Name         | CharacterString                   | AirDirectionUD_status                              | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_INPUT(13)                               | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 8   | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}                  | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                   | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)        | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE/TRUE   | R      | R       |
| Number_Of_States    | Unsigned                          | 8  | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Air direction status table</b> below. | O      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Alarm_Values        | List of Unsigned                  | -  | O      | -       |
| Fault_Values        | List of Unsigned                  | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 9. Air direction up-down status

| Present_Value | State_Text |
|---------------|------------|
| 1             | POS1       |
| 2             | POS2       |
| 3             | POS3       |
| 4             | POS4       |
| 5             | POS5       |
| 6             | POS6       |
| 7             | POS7       |
| 8             | SWING      |

### 7.1.3.13. AirDirectionUD\_command (Multistate Output Object Type)

It sets the indoor unit's vertical air direction (up-down).

| Property Identifier | Property Datatype                 | Value  | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Output, 2)                             | R      | R       |
| Object_Name         | CharacterString                   | AirDirectionUD_command                             | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_OUTPUT (14)                             | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 8   | R      | W       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                       | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                   | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                              | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE  | R      | R       |
| Number_Of_States    | Unsigned                          | 8  | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Air direction command table</b> below | O      | R       |
| Priority_Array      | BACnetPriorityArray               | -  | R      | R       |
| Relinquish_Default  | Unsigned                          | -  | R      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Feedback_Value      | Unsigned                          | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 10. Air direction up-down command

| Present_Value | State_Text |
|---------------|------------|
| 1             | POS1       |
| 2             | POS2       |
| 3             | POS3       |
| 4             | POS4       |
| 5             | POS5       |
| 6             | POS6       |
| 7             | POS7       |
| 8             | SWING      |

### 7.1.3.14. RoomTemperature\_status (Analog Input Object Type)

It reports the ambient temperature perceived by the sensor from the AC system side. It can be reported by the indoor unit or the wired remote controller's sensor.



#### NOTE

To know more, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 1)                               | R      | R       |
| Object_Name         | CharacterString                   | RoomTemperature_status                          | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)                                | R      | R       |
| Present_Value       | REAL                              | 0 .. 40°C / 32 .. 104°F                         | R      | R       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}               | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)     | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Celsius degrees (62)<br>Fahrenheit degrees (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 0°C / 32°F                                      | O      | -       |
| Max_Pres_Value      | REAL                              | 40°C / 104°F                                    | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.15. RoomTemperature\_command (Analog Output Object Type)

It is used to write the ambient temperature perceived by a sensor from the BACnet side.



#### NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Output, 1)                              | R      | R       |
| Object_Name         | CharacterString                   | RoomTemperature_command                         | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_OUTPUT (1)                               | R      | R       |
| Present_Value       | REAL                              | 0 .. 40°C / 32 .. 104°F                         | R      | W       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                    | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                           | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Celsius degrees (62)<br>Fahrenheit degrees (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 0°C / 32°F                                      | O      | -       |
| Max_Pres_Value      | REAL                              | 40°C / 104°F                                    | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Priority_Array      | BACnetPriorityArray               | BACnetPriorityArray                             | R      | R       |
| Relinquish_Default  | Unsigned                          | -32768  | R      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.16. ErrorCode (Analog Input Object Type)

It indicates the AC system's current error.

| Property Identifier | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 2)            | R      | R       |
| Object_Name         | CharacterString                   | ErrorCode                    | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)             | R      | R       |
| Present_Value       | REAL                              | -1 .. 349                    | R      | R       |
| Description         | CharacterString                   | -                            | O      | -       |
| Device_Type         | CharacterString                   | -                            | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE                        | R      | R       |
| Update_Interval     | Unsigned                          | 300                          | O      | -       |
| Units               | BACnetEngineeringUnits            | NO_UNITS (95)                | R      | R       |
| Min_Pres_Value      | REAL                              | -1                           | O      | -       |
| Max_Pres_Value      | REAL                              | 6846                         | O      | -       |
| Resolution          | REAL                              | -                            | O      | -       |
| COV_Increment       | REAL                              | 0                            | O      | W       |
| Time_Delay          | Unsigned                          | -                            | O      | -       |
| Notification_Class  | Unsigned                          | -                            | O      | -       |
| High_Limit          | REAL                              | -                            | O      | -       |
| Low_Limit           | REAL                              | -                            | O      | -       |
| Deadband            | REAL                              | -                            | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -                            | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name        | CharacterString                   | -                            | O      | -       |



#### NOTICE

For more information on each error code, see [Error Codes \(page 69\)](#).

### 7.1.3.17. ErrorCodeM (Multistate Input Object Type)

It indicates the AC system's current error.

| Property Identifier | Property Datatype                 | Value                                    | ASHRAE | Gateway |
|---------------------|-----------------------------------|--|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Input, 4)                    | R      | R       |
| Object_Name         | CharacterString                   | ErrorCodeM                               | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_INPUT(13)                     | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 45                                  | R      | R       |
| Description         | CharacterString                   | -  | O      | -       |
| Device_Type         | CharacterString                   | -  | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}             | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                         | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                    | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE                                    | R      | R       |
| Number_Of_States    | Unsigned                          | 44                                       | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Error codes table</b> below | O      | R       |
| Time_Delay          | Unsigned                          | -  | O      | -       |
| Notification_Class  | Unsigned                          | -  | O      | -       |
| Alarm_Values        | List of Unsigned                  | -  | O      | -       |
| Fault_Values        | List of Unsigned                  | -  | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -  | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -  | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -  | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -  | O      | -       |
| Profile_Name        | CharacterString                   | -  | O      | -       |

Table 11. Error Codes

| ErrorCodeM | State_Text | ErrorCodeM | State_Text | ErrorCodeM | State_Text |
|------------|------------|------------|------------|------------|------------|
| 1          | -          | 16         | 19         | 31         | 45         |
| 2          | CommError  | 17         | 21         | 32         | 46         |
| 3          | 1          | 18         | 22         | 33         | 47         |
| 4          | 2          | 19         | 23         | 34         | 51         |
| 5          | 3          | 20         | 24         | 35         | 52         |
| 6          | 4          | 21         | 29         | 36         | 53         |
| 7          | 5          | 22         | 30         | 37         | 54         |
| 8          | 6          | 23         | 31         | 38         | 56         |
| 8          | 6.         | 24         | 32         | 39         | 57         |
| 9          | 7          | 25         | 35         | 40         | 58         |
| 10         | 8          | 26         | 36         | 41         | b0         |
| 11         | 9          | 27         | 38         | 42         | b1         |
| 12         | 11         | 28         | 39         | 43         | b5         |
| 13         | 12         | 29         | 43         | 44         | EE         |
| 14         | 13         | 30         | 44         |            |            |

### 7.1.3.18. ErrorActive (Binary Input Object Type)

It indicates if there is an active error in the AC system.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Input, 1)            | R      | R       |
| Object_Name               | CharacterString                   | ErrorActive                  | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_INPUT (3)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | R       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                   | R      | R       |
| Inactive_Text             | CharacterString                   | No                           | O      | R       |
| Active_Text               | CharacterString                   | Error                        | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.19. ErrorAddress (Analog Input Object Type)

It indicates the address of the indoor unit which is reporting the error.

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Intesis |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 4)                             | R      | R       |
| Object_Name         | CharacterString                   | ErrorAddress                                  | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)                              | R      | R       |
| Present_Value       | REAL                              | -   | R      | R       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}             | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                              | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)<br>UNRELIABLE_OTHER (7) | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE/TRUE                                    | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | NO_UNITS (95)                                 | R      | R       |
| Min_Pres_Value      | REAL                              | -   | O      | -       |
| Max_Pres_Value      | REAL                              | -   | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |

### 7.1.3.20. ErrorReset (Binary Output Object Type)

It resets the error signal.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Intesis |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Output, 5)           | R      | R       |
| Object_Name               | CharacterString                   | ErrorReset                   | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_OUTPUT (4)            | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | W       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                   | R      | R       |
| Inactive_Text             | CharacterString                   | Normal                       | O      | R       |
| Active_Text               | CharacterString                   | Reset                        | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | R       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | R       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Feedback_Value            | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.21. OnTimeCounter (Analog Value Object Type)

It indicates the AC unit running time.

| Property Identifier | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Value, 0)            | R      | R       |
| Object_Name         | CharacterString                   | OnTimeCounter                | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_VALUE (2)             | R      | R       |
| Present_Value       | REAL                              | 0 .. 65535                   | R      | R/W     |
| Description         | CharacterString                   | -                            | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE                        | R      | R       |
| Update_Interval     | Unsigned                          | -                            | O      | -       |
| Units               | BACnetEngineeringUnits            | Hours (71)                   | R      | R       |
| Min_Pres_Value      | REAL                              | 0                            | O      | -       |
| Max_Pres_Value      | REAL                              | 65535                        | O      | -       |
| Resolution          | REAL                              | -                            | O      | -       |
| COV_Increment       | REAL                              | 0                            | O      | W       |
| Time_Delay          | Unsigned                          | -                            | O      | -       |
| Notification_Class  | Unsigned                          | -                            | O      | -       |
| High_Limit          | REAL                              | -                            | O      | -       |
| Low_Limit           | REAL                              | -                            | O      | -       |
| Deadband            | REAL                              | -                            | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -                            | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name        | CharacterString                   | -                            | O      | -       |

### 7.1.3.22. FilterSign (Binary Input Object Type)

It indicates the status of the filter.

| Property Identifier       | Property Datatype                 | Value   | ASHRAE | Intesis |
|---------------------------|-----------------------------------|---|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Input, 1)                             | R      | R       |
| Object_Name               | CharacterString                   | FilterSign                                    | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_OUTPUT (4)                             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)                     | R      | R       |
| Description               | CharacterString                   | -   | O      | -       |
| Device_Type               | CharacterString                   | -   | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}             | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)                              | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)<br>UNRELIABLE_OTHER (7) | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE   | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                                    | R      | R       |
| Inactive_Text             | CharacterString                   | OK  | O      | R       |
| Active_Text               | CharacterString                   | Dirty   | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -   | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -   | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -   | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -   | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -   | O      | -       |
| Time_Delay                | Unsigned                          | -   | O      | -       |
| Notification_Class        | Unsigned                          | -   | O      | -       |
| Feedback_Value            | BACnetBinaryPV                    | -   | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name              | CharacterString                   | -   | O      | -       |

### 7.1.3.23. FilterSignAddress (Analog Input Object Type)

It indicates the AC indoor unit address reporting the filter signal.

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Intesis |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Input, 18)                            | R      | R       |
| Object_Name         | CharacterString                   | FilterSignAddress                             | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_INPUT (0)                              | R      | R       |
| Present_Value       | REAL                              | -   | R      | R       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                  | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                              | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)<br>UNRELIABLE_OTHER (7) | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | -   | R      | R       |
| Min_Pres_Value      | REAL                              | -   | O      | -       |
| Max_Pres_Value      | REAL                              | -   | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |

### 7.1.3.24. FilterReset (Binary Output Object Type)

It resets the filter signal.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Intesis |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Output, 4)           | R      | R       |
| Object_Name               | CharacterString                   | FilterReset                  | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_OUTPUT (4)            | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | W      | W       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                   | R      | R       |
| Inactive_Text             | CharacterString                   | Normal                       | O      | R       |
| Active_Text               | CharacterString                   | Reset                        | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | R       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | R       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Feedback_Value            | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.25. Occupancy (Multistate Value Object Type)

It indicates the current occupancy status.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Value, 0)                         | R      | R       |
| Object_Name         | CharacterString                   | Occupancy                                     | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_VALUE (19)                         | R      | R       |
| Present_Value       | BACnetBinaryPV                    | 1 .. 3  | R      | R/W     |
| Description         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                  | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                              | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                         | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Number_Of_States    | Unsigned                          | 3   | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>Occupancy values table</b> below | O      | R       |
| Priority_Array      | BACnetPriorityArray               | -   | R      | -       |
| Relinquish_Default  | Unsigned                          | -   | R      | -       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| Alarm_Value         | Unsigned                          | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |

Table 12. Occupancy values

| Present_Value | State_Text |
|---------------|------------|
| 1             | Occupied   |
| 2             | Unoccupied |
| 3             | Disabled   |

### 7.1.3.26. OccupiedCoolSetPoint (Analog Value Object Type)

It indicates the temperature setpoint when the room is occupied, the cool mode is selected, and the occupancy object is enabled.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Value, 1)                               | R      | R       |
| Object_Name         | CharacterString                   | OccupiedCoolSetPoint                            | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_VALUE (2)                                | R      | R       |
| Present_Value       | REAL                              | 16 .. 32°C / 60 .. 90°F                         | R      | R/W     |
| Description         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                    | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                           | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Degrees Celsius (62)<br>Degrees Fahrenheit (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 0   | O      | -       |
| Max_Pres_Value      | REAL                              | 65535   | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.27. OccupiedHeatSetPoint (Analog Value Object Type)

It indicates the temperature setpoint when the room is occupied, the heat mode is selected, and the occupancy object is enabled.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Value, 2)                               | R      | R       |
| Object_Name         | CharacterString                   | OccupiedHeatSetPoint                            | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_VALUE (2)                                | R      | R       |
| Present_Value       | REAL                              | 16 .. 32°C / 60 .. 90°F                         | R      | R/W     |
| Description         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                    | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                           | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Degrees Celsius (62)<br>Degrees Fahrenheit (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 16°C / 60°F                                     | O      | -       |
| Max_Pres_Value      | REAL                              | 32°C / 90°F                                     | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.28. UnoccupiedCoolSetPoint (Analog Value Object Type)

It indicates the setpoint when the room is unoccupied, the cool mode is selected, and the occupancy object is enabled.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Value, 3)                               | R      | R       |
| Object_Name         | CharacterString                   | UnoccupiedCoolSetPoint                          | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_VALUE (2)                                | R      | R       |
| Present_Value       | REAL                              | 16 .. 32°C / 60 .. 90°F                         | R      | R/W     |
| Description         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                    | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                           | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Degrees Celsius (62)<br>Degrees Fahrenheit (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 16°C / 60°F                                     | O      | -       |
| Max_Pres_Value      | REAL                              | 32°C / 90°F                                     | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.29. UnoccupiedHeatSetPoint (Analog Value Object Type)

It indicates the setpoint temperature when the room is unoccupied, the heat mode is selected, and the occupancy object is enabled.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Gateway |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Analog Value, 4)                               | R      | R       |
| Object_Name         | CharacterString                   | UnoccupiedHeatSetPoint                          | R      | R       |
| Object_Type         | BACnetObjectType                  | ANALOG_VALUE (2)                                | R      | R       |
| Present_Value       | REAL                              | 16 .. 32°C / 60 .. 90°F                         | R      | R/W     |
| Description         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE}                    | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0)                           | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE   | R      | R       |
| Update_Interval     | Unsigned                          | -   | O      | -       |
| Units               | BACnetEngineeringUnits            | Degrees Celsius (62)<br>Degrees Fahrenheit (64) | R      | R       |
| Min_Pres_Value      | REAL                              | 16°C / 60°F                                     | O      | -       |
| Max_Pres_Value      | REAL                              | 32°C / 90°F                                     | O      | -       |
| Resolution          | REAL                              | -   | O      | -       |
| COV_Increment       | REAL                              | 0   | O      | W       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| High_Limit          | REAL                              | -   | O      | -       |
| Low_Limit           | REAL                              | -   | O      | -       |
| Deadband            | REAL                              | -   | O      | -       |
| Limit_Enable        | BACnetLimitEnable                 | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |



#### NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

### 7.1.3.30. OccupancyContinuousCheck (Binary Value Object Type)

It indicates if the system is continuously checking the setpoint and occupancy conditions.



#### NOTE

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Value, 0)            | R      | R       |
| Object_Name               | CharacterString                   | OccupancyContinuousCheck     | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_VALUE (5)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | R/W     |
| Description               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Inactive_Text             | CharacterString                   | Disabled                     | O      | R       |
| Active_Text               | CharacterString                   | Enabled                      | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | -       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.31. UnoccupiedDeadbandAction (Binary Value Object Type)

It indicates the action to be performed when Unoccupancy is enabled, and Room Temperature is within the deadband.


**NOTE**

To know more, see [Occupancy Function \(page 55\)](#).

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Value, 1)            | R      | R       |
| Object_Name               | CharacterString                   | UnoccupiedDeadbandAction     | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_VALUE (5)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | R/W     |
| Description               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Inactive_Text             | CharacterString                   | Off                          | O      | R       |
| Active_Text               | CharacterString                   | CurrentMode                  | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | -       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.32. LockRemoteControl (Binary Value Object Type)

It is used to lock or unlock the wired remote controller.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Binary Value, 2)            | R      | R       |
| Object_Name               | CharacterString                   | LockRemoteControl            | R      | R       |
| Object_Type               | BACnetObjectType                  | BINARY_VALUE (5)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | INACTIVE (0) / ACTIVE (1)    | R      | R/W     |
| Description               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE                        | R      | R       |
| Inactive_Text             | CharacterString                   | Unlocked                     | O      | R       |
| Active_Text               | CharacterString                   | Locked                       | O      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Minimum_Off_Time          | Unsigned32                        | -                            | O      | -       |
| Minimum_On_Time           | Unsigned32                        | -                            | O      | -       |
| Priority_Array            | BACnetPriorityArray               | BACnetPriorityArray          | R      | -       |
| Relinquish_Default        | BACnetBinaryPV                    | INACTIVE (0)                 | R      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |

### 7.1.3.33. DIP\_SW\_S1\_status (Analog Input Object Type)

It indicates the status of the DIP switch block SW1 in decimal value. To get the status of each individual switch (position) of SW1, just convert it to binary. The gateway reads this value only when booting up.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Analog Input, 9)            | R      | R       |
| Object_Name               | CharacterString                   | DIP_SW_S1_status             | R      | R       |
| Object_Type               | BACnetObjectType                  | ANALOG_INPUT (0)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | 0 .. 255                     | R      | R       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE / TRUE                 | R      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |
| Units                     | BACnetEngineeringUnits            | No units (95)                | R      | R       |
| COV_Increment             | REAL                              | 0                            | O      | W       |

### 7.1.3.34. DIP\_SW\_S2\_status (Analog Input Object Type)

It indicates the status of the DIP switch block SW2 in decimal value. To get the status of each individual switch (position) of SW2, just convert it to binary. The gateway reads this value only when booting up.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Analog Input, 10)           | R      | R       |
| Object_Name               | CharacterString                   | DIP_SW_S2_status             | R      | R       |
| Object_Type               | BACnetObjectType                  | ANALOG_INPUT (0)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | 0 .. 255                     | R      | R       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Out_Of_Service            | BOOLEAN                           | FALSE / TRUE                 | R      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |
| Units                     | BACnetEngineeringUnits            | No units (95)                | R      | R       |
| COV_Increment             | REAL                              | 0                            | O      | W       |

### 7.1.3.35. SerialNumber (Analog Input Object Type)

It indicates the serial number of the gateway with the pattern **000EXXXX**, where:

- **000E** is constant and not included in the Present Value property.
- **XXXXX** is the unique device serial number. This is the information provided by the Present Value.

| Property Identifier       | Property Datatype                 | Value                        | ASHRAE | Gateway |
|---------------------------|-----------------------------------|------------------------------|--------|---------|
| Object_Identifier         | BACnetObjectIdentifier            | (Analog Input, 11)           | R      | R       |
| Object_Name               | CharacterString                   | SerialNumber                 | R      | R       |
| Object_Type               | BACnetObjectType                  | ANALOG_INPUT (0)             | R      | R       |
| Present_Value             | BACnetBinaryPV                    | 00000 .. 99999               | R      | R       |
| Description               | CharacterString                   | -                            | O      | -       |
| Device_Type               | CharacterString                   | -                            | O      | -       |
| Status_Flags              | BACnetStatusFlags                 | {FALSE, FALSE, FALSE, FALSE} | R      | R       |
| Event_State               | BACnetEventState                  | STATE_NORMAL (0)             | R      | R       |
| Reliability               | BACnetReliability                 | NO_FAULT_DETECTED (0)        | O      | R       |
| Polarity                  | BACnetPolarity                    | NORMAL (0)                   | R      | R       |
| Change_Of_State_Time      | BACnetDatetime                    | -                            | O      | -       |
| Change_Of_State_Count     | Unsigned                          | -                            | O      | -       |
| Time_Of_State_Count_Reset | BACnetDatetime                    | -                            | O      | -       |
| Elapsed_Active_Time       | Unsigned                          | -                            | O      | -       |
| Time_Of_Active_Time_Reset | BACnetDatetime                    | -                            | O      | -       |
| Time_Delay                | Unsigned                          | -                            | O      | -       |
| Notification_Class        | Unsigned                          | -                            | O      | -       |
| Alarm_Value               | BACnetBinaryPV                    | -                            | O      | -       |
| Event_Enable              | BACnetEventTransitionBits         | -                            | O      | -       |
| Acked_Transitions         | BACnetEventTransitionBits         | -                            | O      | -       |
| Notify_Type               | BACnetNotifyType                  | -                            | O      | -       |
| Event_Time_Stamps         | BACnetArray[N] of BACnetTimeStamp | -                            | O      | -       |
| Profile_Name              | CharacterString                   | -                            | O      | -       |
| Units                     | BACnetEngineeringUnits            | No units (95)                | R      | R       |
| COV_Increment             | REAL                              | 0                            | O      | W       |

### 7.1.3.36. ResetBehaviour (Multistate Value Object Type)

It indicates the Reset behavior of the gateway.

| Property Identifier | Property Datatype                 | Value   | ASHRAE | Intesis |
|---------------------|-----------------------------------|---|--------|---------|
| Object_Identifier   | BACnetObjectIdentifier            | (Multistate Value, 4)                               | R      | R       |
| Object_Name         | CharacterString                   | ResetBehaviour                                      | R      | R       |
| Object_Type         | BACnetObjectType                  | MULTISTATE_Value (19)                               | R      | R       |
| Present_Value       | Unsigned                          | 1 .. 2  | R      | R       |
| Description         | CharacterString                   | -   | O      | -       |
| Device_Type         | CharacterString                   | -   | O      | -       |
| Status_Flags        | BACnetStatusFlags                 | {FALSE, FALSE/TRUE, FALSE, FALSE}                   | R      | R       |
| Event_State         | BACnetEventState                  | STATE_NORMAL (0)                                    | R      | R       |
| Reliability         | BACnetReliability                 | NO_FAULT_DETECTED (0),<br>UNRELIABLE_OTHER (7)      | O      | R       |
| Out_Of_Service      | BOOLEAN                           | FALSE/TRUE  | R      | R       |
| Number_Of_States    | Unsigned                          | 2   | R      | R       |
| State_Text          | BACnetArray[N] of CharacterString | Check the <b>ResetBehavior setting table</b> below. | O      | R       |
| Time_Delay          | Unsigned                          | -   | O      | -       |
| Notification_Class  | Unsigned                          | -   | O      | -       |
| Alarm_Values        | List of Unsigned                  | -   | O      | -       |
| Fault_Values        | List of Unsigned                  | -   | O      | -       |
| Event_Enable        | BACnetEventTransitionBits         | -   | O      | -       |
| Acked_Transitions   | BACnetEventTransitionBits         | -   | O      | -       |
| Notify_Type         | BACnetNotifyType                  | -   | O      | -       |
| Event_Time_Stamps   | BACnetArray[N] of BACnetTimeStamp | -   | O      | -       |
| Profile_Name        | CharacterString                   | -   | O      | -       |

ResetBehaviour interpretation is possible using the value in the following correspondence table.

Table 13. ResetBehavior setting table

| Present_Value | Contents displayed in State_Text | Description   |
|---------------|----------------------------------|---|
| 1             | Store AC status                  | Values for On/Off, Mode, Fan speed, Vanes position, and Setpoint are stored in the gateway's non-volatile memory. After a reset, the gateway restores these values. |
| 2             | Do not store AC status           | Values for On/Off, Mode, Fan speed, Vanes position, and Setpoint are not stored. After a reset, the values for these signals will be the BACnet default ones.       |

## 7.2. Occupancy Function



### IMPORTANT

The Occupancy function is only available for BACnet.

The Occupancy function determines the AC unit's behavior depending on the presence or absence of people in the room. This signal is processed directly in the Intesis gateway and has the capacity to modify three parameters of the AC system: Setpoint, Mode, and On/Off.



### IMPORTANT

This function requires a presence sensor on the control system (BMS) side, which determines the state of the **Occupancy** object:

- **Occupied**: Someone is in the room.
- **Unoccupied**: No one is in the room.
- **Disabled**: The function is disabled

Besides the Occupancy object, and to adjust the settings of the Occupancy function, the gateway offers these BACnet objects:

- **Occupancy Cool Setpoint (OCS)**: Setpoint temperature when the AC unit is in cool mode and someone is present in the room.
- **Unoccupancy Cool SetPoint (UCS)**: Setpoint temperature when the AC unit is in cool mode and no one is in the room.
- **Occupancy Heat Setpoint (OHS)**: Setpoint temperature when the AC unit is in heat mode and someone is present in the room.
- **Unoccupancy Heat SetPoint (UHS)**: Setpoint temperature when the AC unit is in heat mode and no one is in the room.

*Figure 5. Temperature setpoint objects related to the room's occupancy status and the AC unit's mode*



### NOTICE

The minimum difference between Cool and Heat setpoints must be 2°C / 4°F.

- **Occupancy Continuous check**: It determines when the gateway checks the room's occupancy:
  - If this object's value is 1 (active), the gateway checks the occupancy when the occupancy status and the room's temperature change.

- If this object's value is 0 (inactive), the gateway only checks the occupancy when the occupancy status changes.
- **Unoccupied Deadband Action:** It determines the AC unit's behavior when the room is unoccupied and the ambient temperature is within the deadband.
  - If this object's value is 1 (active), the indoor unit will remain on.
  - If this object's value is 0 (inactive), the indoor unit will turn off.

When there is presence in the room, and according to the current room temperature, the AC unit's **mode**, **setpoint**, and **on/off** will be set to:

| Condition                    | Setpoint   | Mode         | On/Off |
|------------------------------|--|--------------|--------|
| Room temperature > OCS       | Current OCS value  | Cool         | On     |
| Room temperature < OHS       | Current OCS value  | Heat         | On     |
| OCS < Room temperature > OHS | OCS/OHS depending on the current mode<br>(If Fan or Dry mode is active, no setpoint is sent) | Current mode | On     |

When there is no presence in the room, and according to the current room temperature, the AC unit's **mode**, **setpoint** and **on/off** will be set to:

| Condition                    | Setpoint   | Mode         | On/Off                     |
|------------------------------|--|--------------|----------------------------|
| Room temperature > OCS       | Current UCS value  | Cool         | On                         |
| Room temperature < OHS       | Current UHS value  | Heat         | On                         |
| OCS < Room temperature > OHS | UCS/UHS depending on the current mode<br>(If Fan or Dry mode is active, no setpoint is sent) | Current mode | On<br>(Deadband action=1)  |
|                              |  |              | Off<br>(Deadband action=0) |



### NOTICE

Any local change (for example with the remote control) in the Setpoint, Mode, or the On/Off signal will disable the Occupancy function.

## 8. Modbus Specifications

The following sections provide the gateway's specifications when it is set for Modbus RTU.

### 8.1. Implemented Modbus Functions

The IN485HIT001R000 gateway implements the following standard Modbus functions:

- 03: Read Holding Registers
- 04: Read Input Registers
- 06: Write Single Register
- 16: Write Multiple Registers



#### IMPORTANT

Even though function 16 is available, the gateway does not allow writing operations on more than one register with the same request, so the length field when using this function should always be one.

#### 8.1.1. Modbus Physical Layer

The IN485HIT001R000 gateway implements a Modbus RTU (server) interface to be connected to an EIA-485 bus. It features an 8-N-2 communication (eight data bits, no parity, and two stop bits) with several available baud rates: 2400, 4800, **9600 -default-**, 19200, 38400, 57600, 76800, and 115200 bps. It also supports 8-N-1 communication (eight data bits, no parity, and one stop bit).



#### NOTE

AUTO-DETECT FUNCTION. The gateway will automatically detect the communication type (8-N-1 or 8-N-2) and set itself accordingly. No user action or manual settings are required.

#### 8.1.2. Modbus Registers

| Register name  | Possible values                                   | Register protocol address | Register PLC address | R/W |
|----------------|---|---------------------------|----------------------|-----|
| ON/OFF         | 0: Off<br>1: On                                   | 0                         | 1                    | R/W |
| OPERATION MODE | 0: Auto<br>1: Heat<br>2: Dry<br>3: Fan<br>4: Cool | 1                         | 2                    | R/W |
| FAN SPEED      | 0: Auto<br>1 .. 5: Speed 1 .. Speed 5             | 2                         | 3                    | R/W |

| Register name                     | Possible values  | Register protocol address | Register PLC address | R/W |
|-----------------------------------|--|---------------------------|----------------------|-----|
| VANE U/D POSITION                 | 1 .. 7: Position 1 .. Position 7<br>10: Swing<br><br> <b>NOTE</b><br>The available vane positions may vary depending on the AC model.   | 3                         | 4                    | R/W |
| TEMPERATURE (USER) SETPOINT       | -32768 (Initialization value)<br>Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Temperature requested from the Modbus side. To know more, see <a href="#">Considerations on Temperature Signals (page 67)</a> .                                  | 4                         | 5                    | R/W |
| INDOOR UNIT REFERENCE TEMPERATURE | Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.<br><br> <b>NOTE</b><br>The value range depend on the AC model. | 5                         | 6                    | R   |
| WINDOW CONTACT PROTOCOL INPUT     | 0: Closed (default)<br>1: Open   | 6                         | 7                    | R/W |
| CONTROL OBJECTS DISABLEMENT       | 0: Control objects enabled (default)<br>1: Control objects disabled<br><br> <b>TIP</b><br>Send a 0 to this register if, for an unknown reason, the gateway doesn't work.  | 7                         | 8                    | R/W |
| REMOTE CONTROL DISABLEMENT        | 0: Remote control enabled (default)<br>1: Remote control disabled  | 8                         | 9                    | R/W |
| OPERATION TIME (IN HOURS)         | 0 .. 65535 hours   | 9                         | 10                   | R/W |
| ALARM STATUS                      | 0: No alarm condition<br>1: Alarm condition  | 10                        | 11                   | R   |
| ERROR CODE                        | 0: No error present<br>65535 (-1 if it is read as a signed value): Communication error between the gateway or the remote controller and the AC unit.<br><br>For any other value, see <a href="#">Error Codes (page 69)</a>   | 11                        | 12                   | R   |

| Register name                               | Possible values   | Register protocol address | Register PLC address | R/W |
|---|---|---------------------------|----------------------|-----|
| OPEN WINDOW TIMEOUT (IN MINUTES)            | 0 .. 30 minutes<br>Default value: 30  | 13                        | 14                   | R/W |
| BAUDRATE                                    | Baudrate currently selected via DIP switch SW2.   | 14                        | 15                   | R   |
| MODBUS SLAVE ADDRESS                        | 1 .. 63   | 15                        | 16                   | R   |
| MAX NUM OF FANSPEEDS                        | 3 .. 6  | 21                        | 22                   | R   |
| INPUT SENSOR TEMPERATURE                    | 0x8000 (-32768): (Initialization value). No temperature is provided by an external sensor.<br>Any other value: Ambient temperature reported by the Modbus sensor.   | 22                        | 23                   | R/W |
| AC REAL SETPOINT                            | Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.<br><br> <b>NOTE</b><br>The value range depend on the AC model.                                    | 23                        | 24                   | R   |
| ACTUAL AC MAX SETPOINT                      | -32768 (Initialization value)<br>Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.<br><br> <b>NOTE</b><br>The value range depend on the AC model. | 24                        | 25                   | R   |
| ACTUAL AC MIN SETPOINT                      | -32768 (Initialization value)<br>Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.<br><br> <b>NOTE</b><br>The value range depend on the AC model. | 25                        | 26                   | R   |
| WINDOW CONTACT FUNCTIONAL STATUS (FEEDBACK) | 0: Not active (default)<br>1: Active (the window is open)   | 31                        | 32                   | R   |
| WIN CONTACT ON/OFF DISABLEMENT              | 0: Window contact is not disabling On/Off (it is not working).<br>1: Window contact is disabling On/Off (it is in use).   | 40                        | 41                   | R   |
| FILTER RESET                                | 1: Reset  | 43                        | 44                   | W   |
| FILTER STATUS                               | 0: Off<br>1: On   | 44                        | 45                   | R   |

| Register name                          | Possible values  | Register protocol address | Register PLC address | R/W |
|--|--|---------------------------|----------------------|-----|
| ERROR RESET                            | 1: Reset   | 45                        | 46                   | W   |
| SWITCH VALUE                           | DIP switches current value   | 48                        | 49                   | R   |
| ANTIFREEZE OPERATION                   | 0: Disabled<br>1: Enabled  | 56                        | 57                   | R/W |
| INPUT REFERENCE TEMPERATURE (Feedback) | Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.   | 65                        | 66                   | R   |
| RETURN PATH TEMPERATURE                | Value in °C; °F; x1; x10<br><br> <b>NOTE</b><br>Set the temperature units via the DIP switch SW2.   | 66                        | 67                   | R   |
| ERROR ADDRESS                          | It indicates the AC indoor unit address reporting the error  | 81                        | 82                   | R   |
| FILTER SIGNAL ADDRESS                  | It indicates the AC indoor unit address reporting the filter signal  | 86                        | 87                   | R   |
| FW version MSB                         | It shows the first two numbers of the firmware version.<br>Example: For version 1.2.3.4, it will show 1.2 (in hexadecimal).  | 94                        | 95                   | R   |
| FW version LSB                         | It shows the last two numbers of the firmware version.<br>Example: For version 1.2.3.4, it will show 3.4 (in hexadecimal).   | 95                        | 96                   | R   |
| MASTER/SLAVE                           | 0: Slave<br>1: Master  | 98                        | 99                   | R   |
| RESET                                  | 1: Reset   | 99                        | 100                  | W   |
| VIRTUAL TEMP ACTIVE                    | 0: No active<br>1: Active  | 129                       | 130                  | R   |
| WINDOW CONTACT STEP                    | 0: Idle (window is closed).<br>1: Timeout1 (window is opened, timeout starts).<br>2: Timeout2 (it doesn't apply to window contact).<br>3: Window contact applies (window is opened, time is finished, window contact action is applied). | 130                       | 131                  | R   |
| WINDOW CONTACT RELOAD LAST VALUE       | 0: No (default)<br>1: Yes  | 1000                      | 1001                 | R/W |
| WINDOW CONTACT LOCK WHEN OPEN          | 0: No<br>1: Yes  | 1001                      | 1002                 | R/W |
| WINDOW TIMEOUT (IN MINUTES)            | 0 .. 30  | 1002                      | 1003                 | R/W |
| RESET BEHAVIOUR                        | 0: Don't store AC status<br>1: Store current AC status (default)   | 1100                      | 1101                 | R/W |
| ONOFF DEFAULT                          | 0: Off<br>1: On  | 1101                      | 1102                 | R/W |
| USERMODE DEFAULT                       | 0: Auto<br>1: Heat<br>2: Dry<br>3: Fan<br>4: Cool  | 1102                      | 1103                 | R/W |

| Register name             | Possible values   | Register protocol address | Register PLC address | R/W |
|---------------------------|---|---------------------------|----------------------|-----|
| FANSP DEFAULT             | 0: Auto<br>1: Quiet<br>2: Low<br>3: Med<br>4: High  | 1103                      | 1104                 | R/W |
| SETPTTEMP DEFAULT         | -32768 (Initialization value)<br>16 .. 30 (°C) (0: undetermined)<br>61 .. 86 (°F) (0: undetermined)                         | 1104                      | 1105                 | R/W |
| VANESUD DEFAULT           | 1: Position-1 (Horizontal)<br>2: Position-2 (Horizontal)<br>3: Position-3 (Medium)<br>4: Position-4 (Vertical)<br>10: Swing | 1105                      | 1106                 | R/W |
| MACHINE MODE              | 0: Normal (default)<br>1: Autochangeover<br>2: Limited setpoint   | 1150                      | 1151                 | R/W |
| MACHINE MIN SETPOINT COOL | Value in °C; °F; x1; x10<br>By default: 24°C / 75°F   | 1153                      | 1154                 | R/W |
| MACHINE MAX SETPOINT COOL | Value in °C; °F; x1; x10<br>By default: 24°C / 75°F   | 1154                      | 1155                 | R/W |
| MACHINE MIN SETPOINT HEAT | Value in °C; °F; x1; x10<br>By default: 28°C / 82°F   | 1155                      | 1156                 | R/W |
| MACHINE MAX SETPOINT HEAT | Value in °C; °F; x1; x10<br>By default: 19°C / 66°F   | 1156                      | 1157                 | R/W |
| REMOTE LOCK AFTER RESET   | 0: Remote lock is disabled after reset<br>1: It keeps the value set in register 8 (AC remote control disablement)           | 1220                      | 1221                 | W   |
| DEVICE IDENTIFIER         | 5120  | 2000                      | 2001                 | R   |
| MODE_MAP                  | Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.            | 2001                      | 2002                 | R   |
| FAN_MAP                   | Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.            | 2002                      | 2003                 | R   |
| VANES_MAP                 | Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.            | 2003                      | 2004                 | R   |
| U_D_VANES_MAP             | Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.            | 2004                      | 2005                 | R   |

| Register name                 | Possible values  | Register protocol address | Register PLC address | R/W |
|-------------------------------|--|---------------------------|----------------------|-----|
| RUNTIME_MODE_RESTRICTIONS_MAP | Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below. | 2012                      | 2013                 | R   |

Table 14. MODE\_MAP bit characterization

| Bit 15                 | Bit 04                    | Bit 03 | Bit 02 | Bit 01 | Bit 00 |
|------------------------|---------------------------|--------|--------|--------|--------|
| 1: Invalid<br>0: Valid | COOL                      | FAN    | DRY    | HEAT   | AUTO   |
|                        | 1: Enabled<br>0: Disabled |        |        |        |        |

Table 15. FAN\_MAP bit characterization

| Bit 15                 | Bit 05                    | Bit 04 | Bit 03 | Bit 02 | Bit 01 | Bit 00 |
|------------------------|---------------------------|--------|--------|--------|--------|--------|
| 1: Invalid<br>0: Valid | FAN_5                     | FAN_4  | FAN_3  | FAN_2  | FAN_1  | AUTO   |
|                        | 1: Enabled<br>0: Disabled |        |        |        |        |        |

Table 16. VANES\_MAP bit characterization

| Bit 15                 | Bit 03                    | Bit 02    | Bit 01       | Bit 00       |
|------------------------|---------------------------|-----------|--------------|--------------|
| 1: Invalid<br>0: Valid | PULSE L/R                 | PULSE U/D | SPECIFIC L/R | SPECIFIC U/D |
|                        | 1: Enabled<br>0: Disabled |           |              |              |

Table 17. U\_D\_VANES\_MAP bit characterization

| Bit 15                 | Bit 10                    | Bit 07 | Bit 06 | Bit 05 | Bit 04 | Bit 03 | Bit 02 | Bit 01 |
|------------------------|---------------------------|--------|--------|--------|--------|--------|--------|--------|
| 1: Invalid<br>0: Valid | SWING                     | POS_7  | POS_6  | POS_5  | POS_4  | POS_3  | POS_2  | POS_1  |
|                        | 1: Enabled<br>0: Disabled |        |        |        |        |        |        |        |

Table 18. RUNTIME\_MODE\_RESTRICTIONS\_MAP bit characterization


| Bit 15                 | Bit 04                         | Bit 03 | Bit 02 | Bit 01 | Bit 00 |
|------------------------|--------------------------------|--------|--------|--------|--------|
| 1: Invalid<br>0: Valid | COOL                           | FAN    | DRY    | HEAT   | AUTO   |
|                        | 1: Not writable<br>0: Writable |        |        |        |        |

## 9. Ambient Temperature and Virtual Temperature Function

The IN485HIT001R000 gateway enables the use of a temperature sensor from the BACnet/Modbus-based BMS.

The reason for using this sensor could be that it is better positioned than the sensor in the indoor unit or the wired remote controller. If an indoor unit or wired remote controller is mounted far away, it can lead to a significant difference between the temperature perceived by their sensors and the actual temperature in the occupied space.

*Figure 6. In this case, the room temperature is four degrees Celsius less than the temperature perceived by the indoor unit's sensor.*

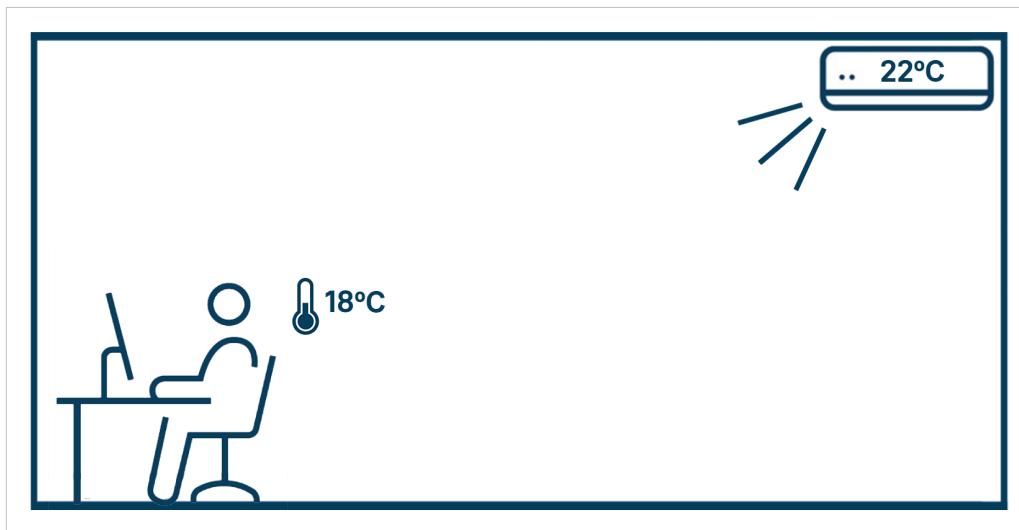

When using the temperature sensor from the BMS side, the IN485HIT001R000 gateway allows two different options:

- Direct overwriting of the AC system reference temperature.
- Activation of the Virtual Temperature function.

As explained below, the choice between these options depends on the role of both the gateway and the Hitachi wired RC. It also depends on the thermostat used by the AC system to determine its reference temperature, which can be either the sensor inside the indoor unit or the sensor inside the wired RC.

### DIRECT OVERWRITING OF THE INDOOR UNIT'S REFERENCE TEMPERATURE

1. Set the IN485HIT001R000 gateway as the header of the bus by setting the SW1-1 (DIP switch 1, position 1) ON. See [DIP Switches \(page 11\)](#).
2. Set the IN485HIT001R000 gateway to read the temperature provided by the wired RC by setting the SW1-2 (DIP switch 1, position 2) ON. See [DIP Switches \(page 11\)](#).
3. Set the Hitachi wired RC as the follower of the bus.



#### NOTE

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

- Set the Hitachi AC system to read the temperature provided by the sensor inside the wired RC.

**NOTE**

This configuration must be performed by a Hitachi authorized installer through the remote controller.

- At this point, the indoor unit could report an error warning that there is an abnormality in the wired RC's thermistor.

**NOTICE**

This error is reported because no valid value has been written yet as the ambient temperature. Take into consideration that, after commissioning the gateway for the first time, the default value for the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**<sup>1</sup> is -32768, which is an invalid value.

- Write the value reported by the BMS sensor using the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**<sup>1</sup>.

**NOTE**

<sup>1</sup> The names of the Modbus registers provided in this section are for reference purposes only; pay attention chiefly to their numerical addresses.

**NOTE**

At this point, any error reported by the indoor unit will disappear. From now on, the AC system will use the value reported by the BACnet/Modbus temperature sensor as its reference temperature.

## ACTIVATION OF THE VIRTUAL TEMPERATURE FUNCTION

**NOTE**

Before explaining how to activate the Virtual Temperature function, it is important to understand how this function works.

### How the Virtual Temperature function works:

The Virtual Temperature function uses the value reported by the temperature sensor connected to the BMS side to apply a formula that establishes the setpoint temperature for the indoor unit. This recalculated setpoint offsets the difference between the real temperature in the room and the temperature at which the indoor unit is operating.

The formula used by the Virtual Temperature function is the following:

$$S_{AC} = T_{AC} - (T_{BMS} - S_{BMS})$$

Where:

- $S_{AC}$ : Recalculated temperature setpoint sent to the indoor unit after the gateway applies the formula.
- $T_{AC}$ : Indoor unit's reference temperature.
- $T_{BMS}$ : Ambient temperature reported by the sensor connected to the BMS side.
- $S_{BMS}$ : Temperature setpoint requested from the BMS side.

Once activated, the Virtual Temperature function recalculates the setpoint when any of these values changes.

In practical terms, when you write a value in the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**, the gateway activates the Virtual Temperature function, using this value to recalculate the indoor unit's reference temperature.

#### **How to activate the Virtual Temperature function:**

The Virtual Temperature function can be activated with the gateway acting either as the header or the follower of the wired RC bus.

- **Procedure with the gateway acting as the header of the RC bus:**

1. Set the IN485HIT001R000 gateway as the header of the bus by setting the SW1-1 (DIP switch 1, position 1) ON. See [DIP Switches \(page 11\)](#).
2. Set the IN485HIT001R000 gateway to read the temperature provided by the indoor unit by setting the SW1-2 (DIP switch 1, position 2) OFF. See [DIP Switches \(page 11\)](#).
3. Set the Hitachi wired RC as the follower of the bus.



##### **NOTE**

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

4. Set the Hitachi AC system to read the temperature provided by the sensor inside the indoor unit.



##### **NOTE**

This configuration must be performed by a Hitachi authorized installer through the remote controller.

- **Procedure with the gateway acting as the follower of the RC bus:**

1. Set the IN485HIT001R000 gateway as the follower of the bus by setting the SW1-1 (DIP switch 1, position 1) OFF. See [DIP Switches \(page 11\)](#).
2. Set the Hitachi wired RC as the header of the bus.



##### **NOTE**

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

3. Set both the gateway and the AC system to read the temperature from the same source, either from the thermistor inside the indoor unit or the wired RC.
  - a. For the gateway, this is done via the SW1-2 (DIP switch 1, position 2):
    - ON: The gateway reads the temperature from the thermistor of the wired RC.
    - OFF: The gateway reads the temperature from the thermistor of the indoor unit.
 To know more, see [DIP Switches \(page 11\)](#).
  - b. For the AC system, this configuration is done via the wired RC must and must be performed by a Hitachi authorized installer.

Once the roles and reading sources of both the gateway and the wired RC are set, proceed as follows:

1. Write the desired setpoint temperature in the BACnet object **Setpoint\_command (Analog Output)**/Modbus register **Temperature (user) setpoint (protocol address 4, PLC address 5)**.

2. Read the temperature value reported by a temperature sensor from the BMS side.
3. Write this value in the BACnet object **RoomTemperature\_Command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**.



#### NOTE

At this point, the Virtual Temperature function is automatically activated. From now on, the AC system will use the value reported by the formula described above as its reference temperature.



#### NOTICE

Due to the formula applied by the Virtual Temperature function, the temperature reported by the AC system and the actual ambient temperature may differ. This must not be taken as an error, but as the normal behavior when the Virtual Temperature function is working.

To know more about the BACnet objects/Modbus registers dedicated to the temperature signals and to the Virtual Temperature function, see [Considerations on Temperature Signals \(page 67\)](#).



#### NOTE

When starting up the gateway, the dedicated object/register to write the ambient temperature perceived from the BMS side reports a value of -32768 (0x8000). For BACnet, this object is **RoomTemperature\_Command (Analog Output)**. For Modbus, this register is **Input sensor temperature (protocol address 22 / PLC address 23)**.



#### FOR BACNET

When starting up the gateway, the Present\_Value property for the RoomTemperature\_Command object is 0, and the Reliability property displays **UNRELIABLE\_OTHER (7)**. This means that no external temperature reference has been provided to the object, so the system is not applying the Virtual Temperature function. However, after receiving the first value, the Reliability property changes to **NO\_FAULT\_DETECTED (0)**. After that, any value can be used in the temperature range, including 0.

## TROUBLESHOOTING

Typical malfunctions with the ambient temperature and the Virtual Temperature function are related to mistakes in the configuration of the gateway's or the wired RC's role, or in the values written in the BACnet objects/Modbus registers. If an error occurs, consider the following:

- **The gateway and the wired RC have the correct role.**

Remember that the gateway can overwrite the reference temperature of the AC system using a temperature sensor from the BMS side only when it is set as the header and the wired RC is set as the follower.

To set the gateway as the header of the bus, set the SW1-1 (DIP switch 1, position 1) ON. To know more, see [Coexistence of the Gateway with a Remote Controller \(page 9\)](#).

The role of the wired RC is usually set through a DIP switch mounted on its board, but you should read the documentation delivered with the AC system to ensure the necessary procedure.

- **The gateway and the wired RC are reading the temperature from the same source.**

Both the gateway and the AC system can be set to read the temperature from the indoor unit or the wired RC. Only when both the gateway and the AC system are set to read the temperature from the wired RC can the gateway overwrite the reference temperature of the AC system using a temperature sensor from the BMS side. Set the gateway to read the temperature of the wired RC thermistor by setting the SW1-2 (DIP switch 1, position 2) ON. To know more, see [DIP Switches \(page 11\)](#).

- **Valid values are written in the BACnet objects/Modbus registers dedicated to the temperature.<sup>2</sup>**

Pay special attention to the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**, which are dedicated to write the value reported by the BMS sensor.



#### NOTE

<sup>2</sup> The following section provides an extended explanation of all the BACnet objects/Modbus registers dedicated to the temperature signals and to the Virtual Temperature function.

## 9.1. Considerations on Temperature Signals



#### NOTE

You can set the temperature signals in degrees Celsius or Fahrenheit via the DIP switch SW2. More information in [DIP Switches \(page 11\)](#).



#### NOTE

The names of the Modbus registers provided in this section are for reference purposes only; pay attention chiefly to their numerical addresses.

*Table 19. Objects and registers dedicated to temperature signals and to the Virtual Temperature function*

| BACnet object                           | Modbus register   | Function when the Virtual Temperature function is inactive  | Function when the Virtual Temperature function is active   |
|---|---|---|--|
| Setpoint_status (Analog Input)          | AC real setpoint (R)<br>(protocol address 23 / PLC address 24)                | It indicates the temperature setpoint sent to the indoor unit.<br><br>It will report the same value as the value introduced in the Setpoint_Command/AC unit temperature setpoint. | It indicates the recalculated temperature setpoint sent to the indoor unit after the gateway applies the $S_{AC} = T_{AC} - (T_{BMS} - S_{BMS})$ formula.<br><br>It may report a value different from the value introduced in the Setpoint_Command/AC unit temperature setpoint. |
| Setpoint_command (Analog Output)        | Temperature (user) setpoint (R/W)<br>(protocol address 4 / PLC address 5)     | It is used to request the temperature setpoint from the BMS side.<br><br>It will report the same value as a wired remote controller connected to the indoor unit (if available).  | It is used to request the temperature setpoint from the BMS side.<br><br>It may report a value different from the one reported by a wired remote controller connected to the indoor unit (if available).   |
| RoomTemperature_status (Analog Input)   | Indoor unit reference temperature (R)<br>(protocol address 5 / PLC address 6) | It indicates the ambient temperature perceived by the sensor from the AC system side (the sensor inside the indoor unit or inside the wired remote controller, if available).     | It indicates the ambient temperature perceived by the sensor from the AC system side (the sensor inside the indoor unit or inside the wired remote controller, if available).  |
| RoomTemperature_command (Analog Output) | Input sensor temperature (R/W)<br>(protocol address 22 / PLC address 23)*     | It is used to activate the Virtual Temperature function by writing the value reported from a BMS side sensor.   | It indicates the temperature reported from a BMS side sensor.  |
| VirtualTemperatureActive (Binary Input) | Virtual Temp Active (R) (protocol address 129 / PLC address 130)**            | It reports a value of 0   | It reports a value of 1  |
| UserSetpoint_status (Analog Input)      | Temperature (user) setpoint (R/W)<br>(protocol address 4 / PLC address 5)     | It indicates the temperature setpoint requested from the BMS side.  | It indicates the original temperature setpoint requested from the BMS side.  |



#### NOTE

\* This register has been available since firmware version 0.8.

**NOTE**

\*\* This Modbus register may be missing in your gateway since it is only implemented in the 485 series. However, the Virtual Temperature function is not dependent on this register, and it is available in your gateway if its order code is listed in the note at the beginning of this section.

**NOTE**

As explained in this topic, and due to the Virtual Temperature function, Hitachi cannot guarantee that the value reported by the **RoomTemperature\_command** object/**Input sensor temperature** register is consistently equal to the actual room temperature.

**VIRTUAL TEMPERATURE FUNCTION EXAMPLE CASE**

Imagine a very cold room with a temperature of 10°C. There's an AC indoor unit mounted in the ceiling, which is very high.

The technician responsible for the BMS wants to raise the room temperature to 20°C. To achieve this, she accesses the console and sets this value in the BACnet object **Setpoint\_command (Analog Output)**/Modbus register **Temperature (user) setpoint (protocol address 4 / PLC address 5)**. The same value of "20" is also reflected in the BACnet object **Setpoint\_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)**.

A few minutes later, the technician checks the BACnet object **RoomTemperature\_status (Analog Input)**/Modbus register **Indoor unit reference temperature (protocol address 5 / PLC address 6)** to determine the temperature reported by the indoor unit's sensor, which reads 17°C. However, the BMS sensor in the room reports a temperature of 13°C. The technician knows that the BMS sensor is better positioned than the indoor unit's sensor. Unfortunately, the indoor unit does not allow the gateway a direct overwriting of the value reported by its sensor temperature. To address this, the technician activates the Virtual Temperature function.

To activate it, she writes the temperature currently perceived by the BMS sensor (13°C) into the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address 22 / PLC address 23)**. As soon as she inputs "13" into that object/register, the BACnet object **VirtualTemperatureActive (Binary Input)**/Modbus register **Virtual Temp Active (protocol address 129 / PLC address 130)** transitions from "0" to "1." This indicates that the Virtual Temperature function is now active and will continuously apply the formula to recalculate the setpoint temperature sent to the indoor unit.

At this moment, the formula values are:  $17-(13-20)=24$ . Therefore, the Virtual Temperature function is currently sending a setpoint of 24°C to the indoor unit, and this value is reflected in the BACnet object **Setpoint\_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)**.

After a few minutes, the technician checks the BACnet object **RoomTemperature\_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address 22 / PLC address 23)** to find the temperature perceived by the BMS sensor: 19°C. Then, she looks at the BACnet object **RoomTemperature\_status (Analog Input)**/Modbus register **Indoor unit reference temperature (protocol address 5 / PLC address 6)**, which reports the temperature sensed by the indoor unit: 24°C.

At this point, the formula applied by the Virtual Temperature function is based on these numbers:  $24-(19-20)=25$ . The technician observes the BACnet object **Setpoint\_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)** and realizes that the Virtual Temperature function has established the setpoint at 25°C.

## 10. Error Codes

### 10.1. Gateway Codes

| Error Code | Error CodeM |                     | Error in Controller | Error Category       | Error Description  |
|------------|-------------|---------------------|---------------------|----------------------|--|
|            | Value       | Text                |                     |                      |  |
| 0          | 1           | —                   | N/A                 | Intesis AC Interface | No active error  |
| -1 (65535) | 2           | CommError           | N/A                 | Intesis AC Interface | Error in the communication of Intesis AC Interface or the Remote Controller with the AC Unit |
| -3         | 3           | MainSub RC Settings | N/A                 | Indoor Unit          | Tripping of Protection Device  |
| -4         | 4           | Initialization      | N/A                 | Outdoor Unit         | Tripping of Protection Device  |

### 10.2. AC System Codes

| Error Code | Error CodeM |      | Error in Controller | Error Category         | Error Description  |
|------------|-------------|------|---------------------|------------------------|--|
|            | Value       | Text |                     |                        |  |
| 1          | 5           | E-01 | 1                   | Indoor Unit            | Tripping of Protection Device                            |
| 2          | 6           | E-02 | 2                   | Outdoor Unit           | Tripping of Protection Device                            |
| 3          | 7           | E-03 | 3                   | Transmission           | Abnormality between Indoor and Outdoor                   |
| 4          | 8           | E-04 | 4                   | Inverter               | Abnormality between Inverter and Control PCB             |
| 5          | 9           | E-05 | 5                   | Transmission           | Abnormality in Power Source Wiring                       |
| 6          | 10          | E-06 | 6                   | Voltage drop           | Fan motor locked, overload, over current                 |
|            |             |      | 6.                  |                        | Swing flap motor error                                   |
| 7          | 11          | E-07 | 7                   | Cycle                  | Overcurrent of AC input                                  |
| 8          | 12          | E-08 | 8                   |                        | Electronic expansion valve drive error                   |
| 9          | 13          | E-09 | 9                   | Outdoor Unit           | Heater overheat  |
| 17         | 14          | E-11 | 11                  | Sensor on Indoor Unit  | Dust collector error / No-maintenance filter error       |
| 18         | 15          | E-12 | 12                  |                        | Capacity setting error (indoor)                          |
| 19         | 16          | E-13 | 13                  |                        | Shortage of water supply                                 |
| 20         | 17          | E-14 | 14                  |                        | Malfunctions of a humidifier system (water leaking)      |
| 25         | 18          | E-19 | 19                  |                        | Malfunctions in a sensor system                          |
| 33         | 19          | E-21 | 21                  | Sensor on Outdoor Unit | Sensor system of drain water error                       |
| 34         | 20          | E-22 | 22                  |                        | Heat exchanger (1) (Liquid pipe) thermistor system error |
| 35         | 21          | E-23 | 23                  |                        | Heat exchanger (1) (Gas pipe) thermistor system error    |
| 36         | 22          | E-24 | 24                  |                        | Sensor system error of fan motor locked, overload        |
| 41         | 23          | E-29 | 29                  |                        | Sensor system of swing flag motor error                  |
| 48         | 24          | E-30 | 30                  |                        | Sensor system of over-current of AC input                |
| 49         | 25          | E-31 | 31                  |                        | Suction air thermistor error                             |

|     |    |      |    |                  |  |  |
|-----|----|------|----|------------------|--|--|
| 50  | 26 | E-32 | 32 |                  |  | Discharge air thermistor system error                    |
| 53  | 27 | E-35 | 35 |                  |  | Contamination sensor error                               |
| 54  | 28 | E-36 | 36 |                  |  | Humidity sensor error                                    |
| 56  | 29 | E-38 | 38 |                  |  | Remote control thermistor error                          |
| 57  | 30 | E-39 | 39 |                  |  | Radiation sensor error                                   |
| 67  | 31 | E-43 | 43 | Pressure         |  | High pressure switch sensor                              |
| 68  | 32 | E-44 | 44 |                  |  | Protection devices activated                             |
| 69  | 33 | E-45 | 45 |                  |  | Outdoor unit PCB assembly failure                        |
| 70  | 34 | E-46 | 46 |                  |  | High pressure switch (HPS) activated                     |
| 71  | 35 | E-47 | 47 |                  |  | Low pressure switch (LPS) activated                      |
| 81  | 36 | E-51 | 51 | Inverter         |  | Overload of inverter compressor motor                    |
| 82  | 37 | E-52 | 52 |                  |  | Over current of STD compressor motor                     |
| 83  | 38 | E-53 | 53 |                  |  | Overload of fan motor / Over current of fan motor        |
| 84  | 39 | E-54 | 54 |                  |  | Overcurrent of AC input                                  |
| 86  | 40 | E-56 | 56 | Outdoor Fan      |  | Electronic expansion valve drive error                   |
| 87  | 41 | E-57 | 57 |                  |  | Four-way valve error                                     |
| 88  | 42 | E-58 | 58 |                  |  | Pump motor over current                                  |
| 176 | 44 | E-B0 | b0 | IU model setting |  | Incorrect setting address or refrigerant cycle           |
| 177 | 43 | E-B1 | b1 | Number setting   |  | Incorrect setting address or refrigerant cycle           |
| 181 | 44 | E-B5 | b5 |                  |  | Incorrect setting of indoor unit number for H- LINK type |
| 238 | 45 | E-EE | EE | Inverter         |  | Water temperature abnormal                               |



### NOTE

If you detect a non-listed error code, please contact Hitachi technical support.